

BMW S 1000 RR Tail Tidy




Kit Contents PRN014343


- A 1 x Rubber Bung
- B 1 x Retro Light
- © 1 x Loom Connector
- D 2 x M4 Flange Nuts
- E 2 x Indicator Spacers
- ① 2 x M6 x 16 Black Button Head Bolts
- © 2 x M5 x 16 Black Button Head Bolts
- 🖲 5 x M5 x 10 Black Button Head Bolts





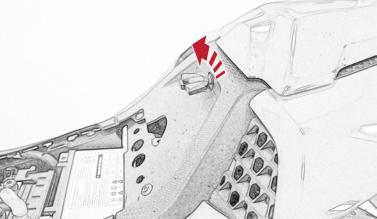



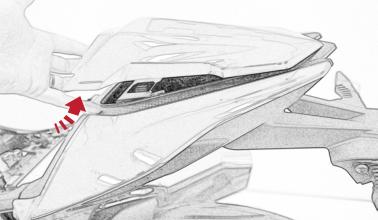








IIII




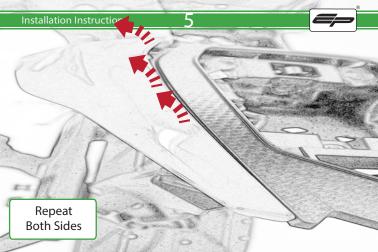


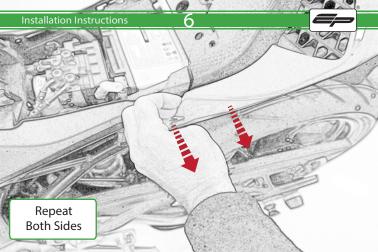




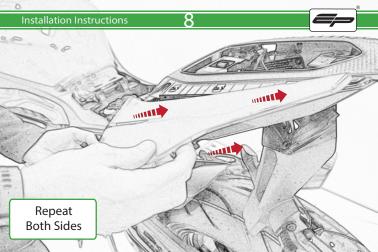

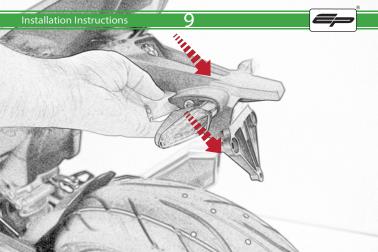

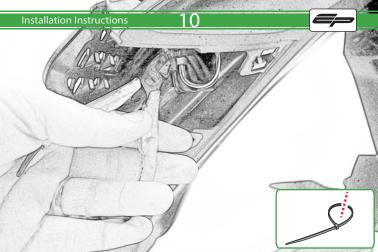


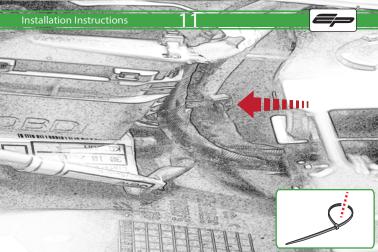








Q



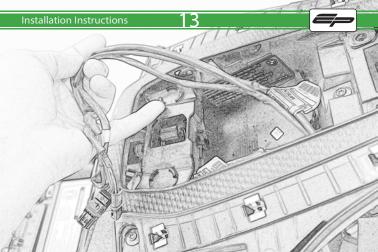




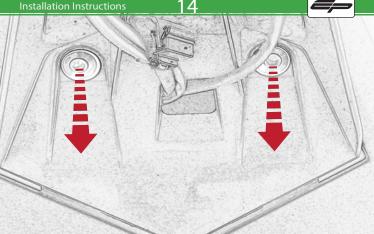

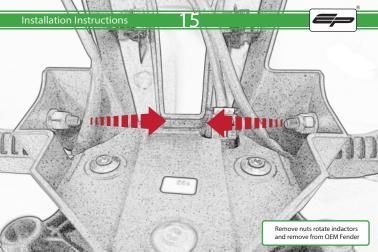







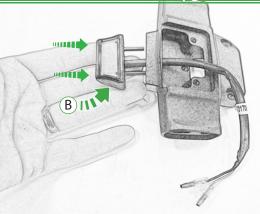







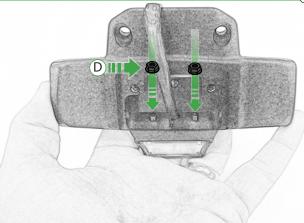






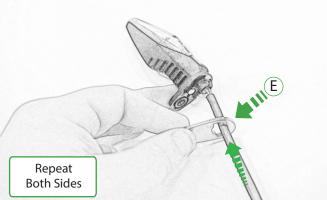

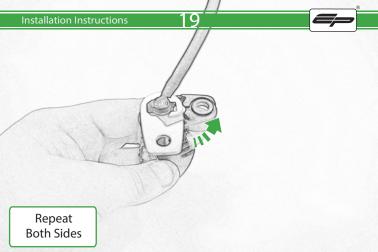






0




h




21

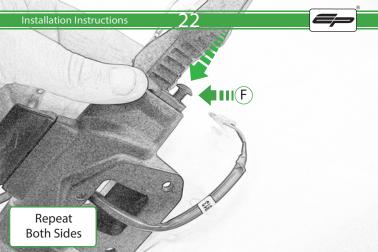

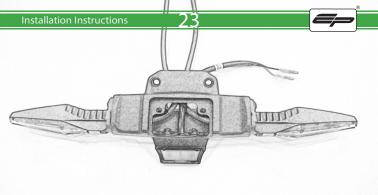





Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

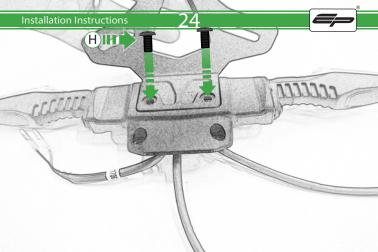





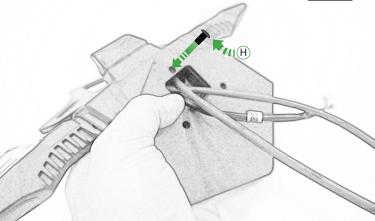

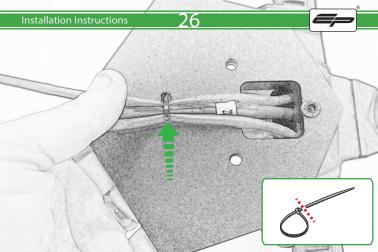







77










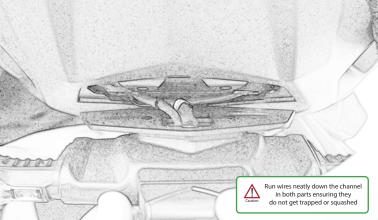

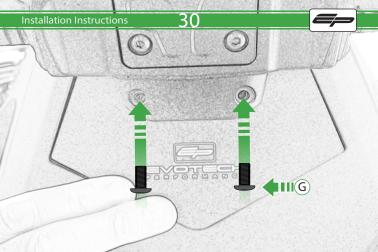









-


... Tes pera :

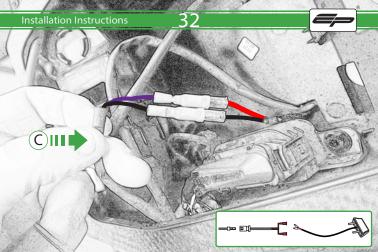








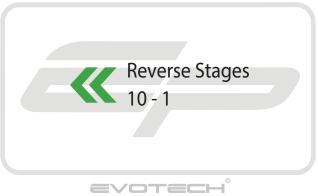


PERFORMANCE



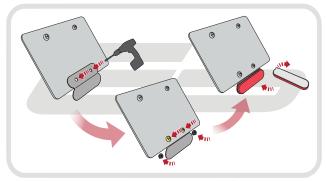



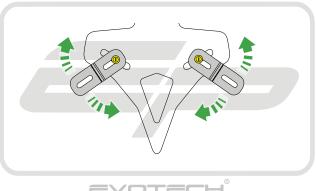





After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com