


www.evotech-performance.com Ducati Multistrada V4 Tail Tidy Instructions




Kit Contents PRN015778


- (A) 2 x M4 x 12mm Black Button Bolts
- B 2 x Light Spacer
- © 2 x Indicator Shields
- D 2 x M5 x 16mm Black Button Bolts
- (E) 2 x M5 x 12mm Countersunk Screw
- (F) 2 x M6 x 16mm Caphead
- ^(G) 2 x M6 x 25mm Black Button Bolts
- (H) 2 x Large Spacer
- 4 x Indicator Cups
- J 4 x M5 x 12mm Black Button Bolts
- K 4 x Small Spacer
 4 x M6 x 12mm Black Button Bolts



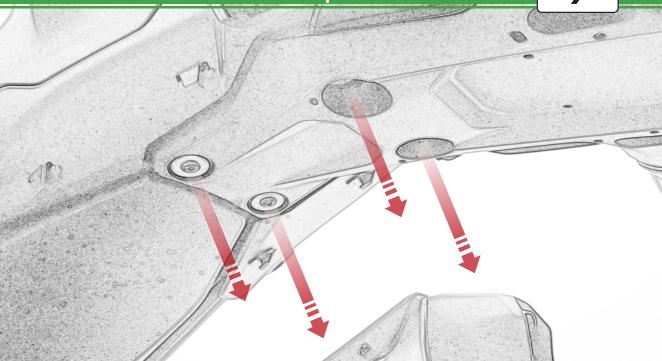


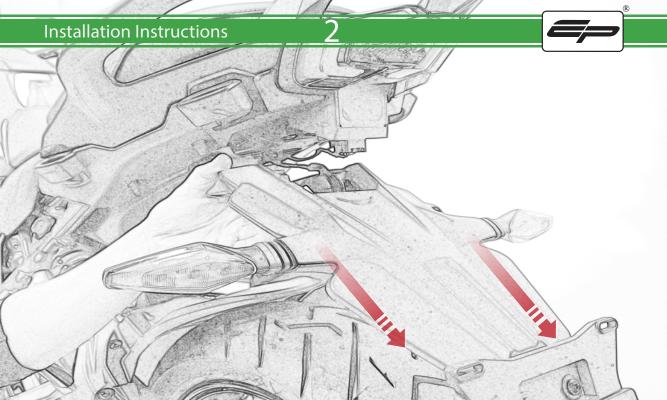




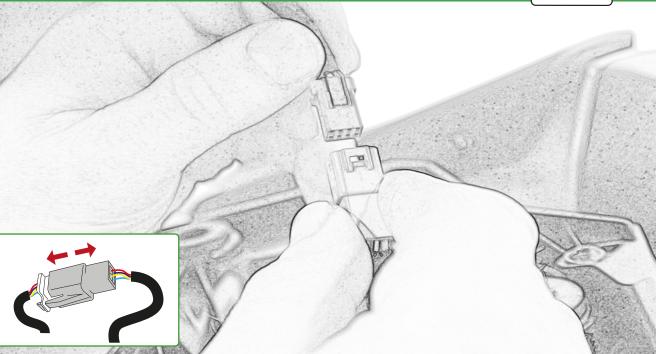




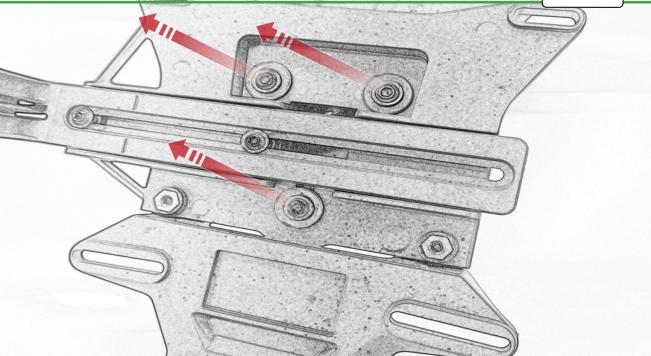



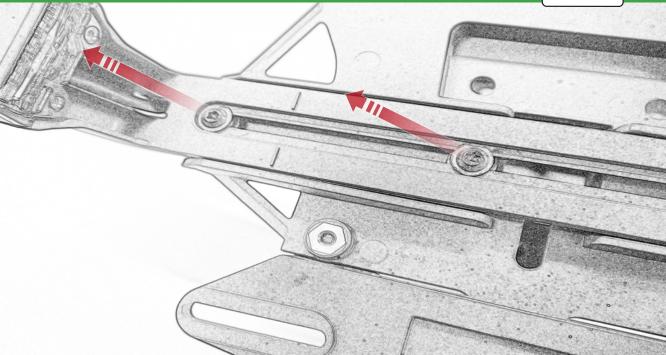

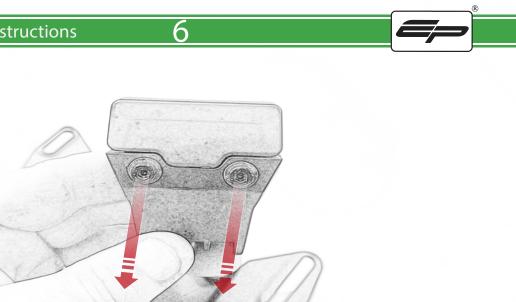


0





(0)




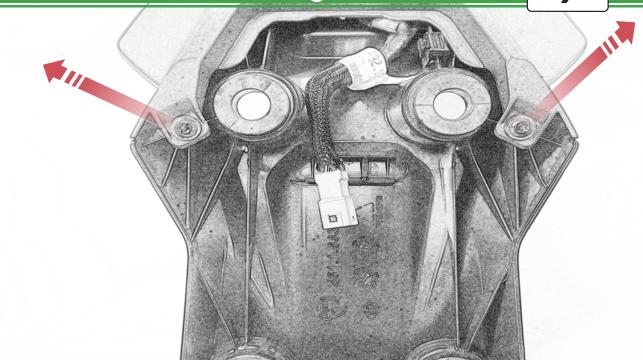


Q

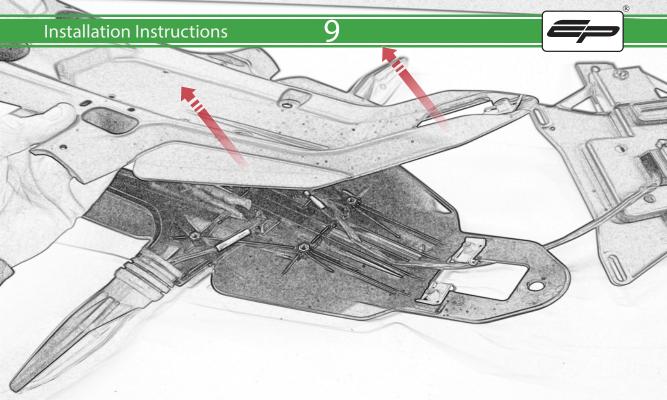

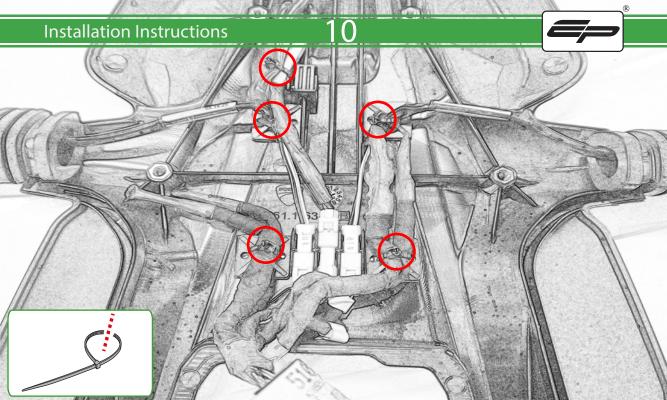


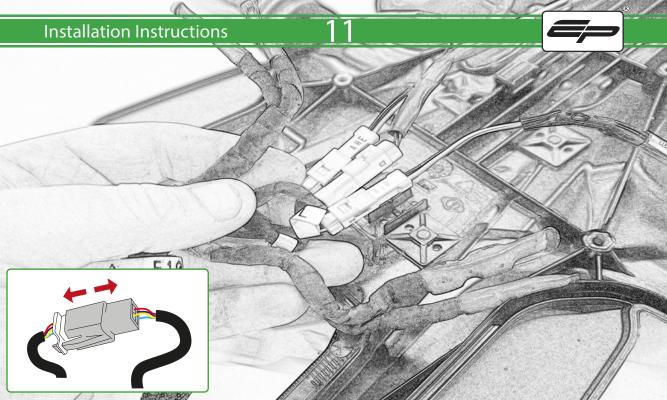


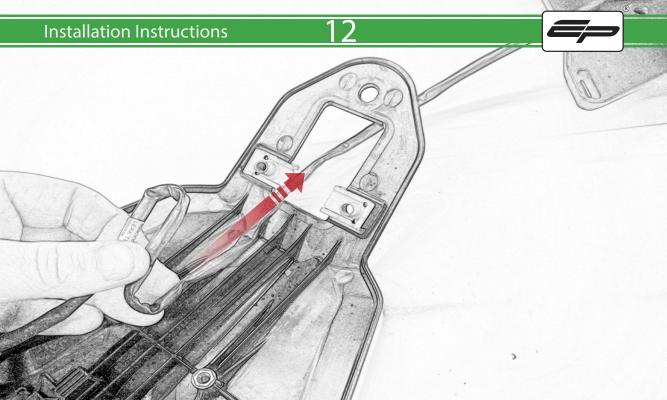






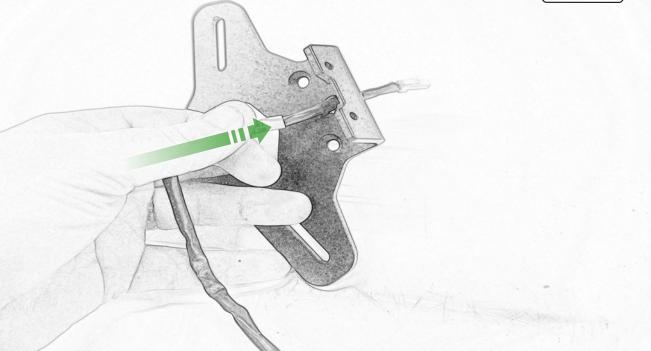


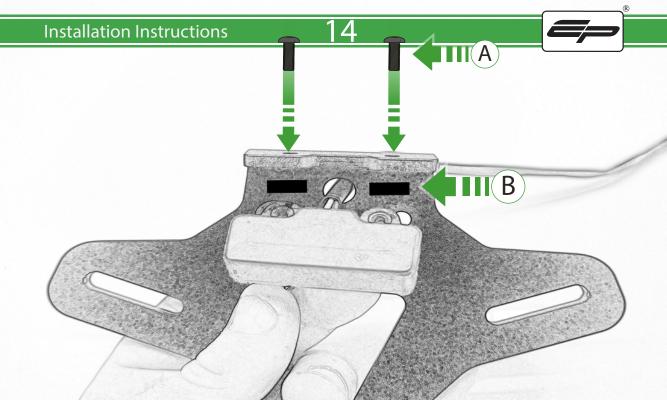





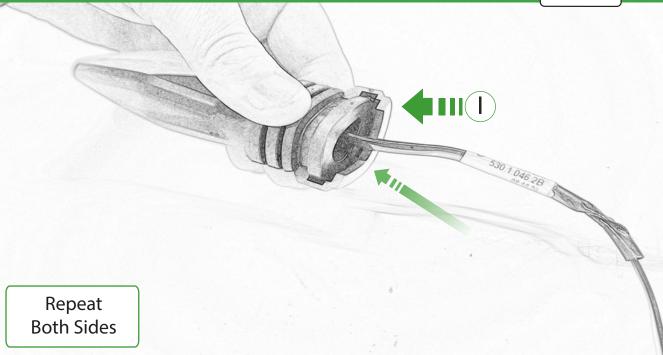

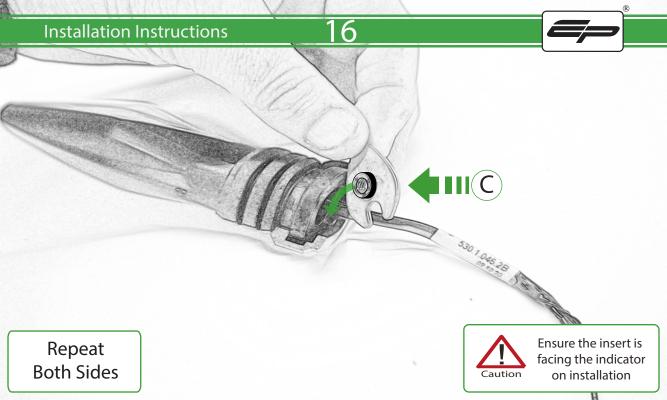








530.1.040

Ensure the insert is facing the indicator on installation







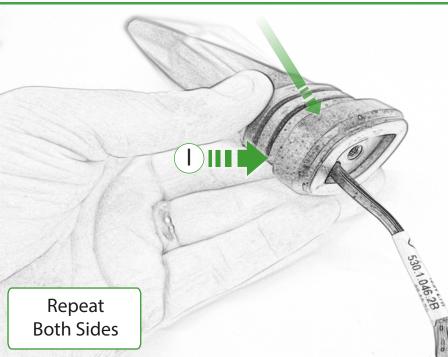







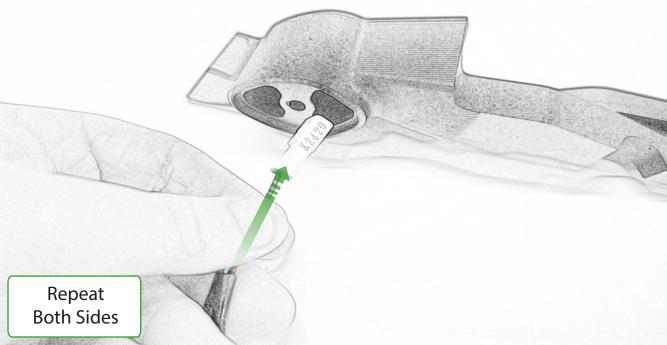


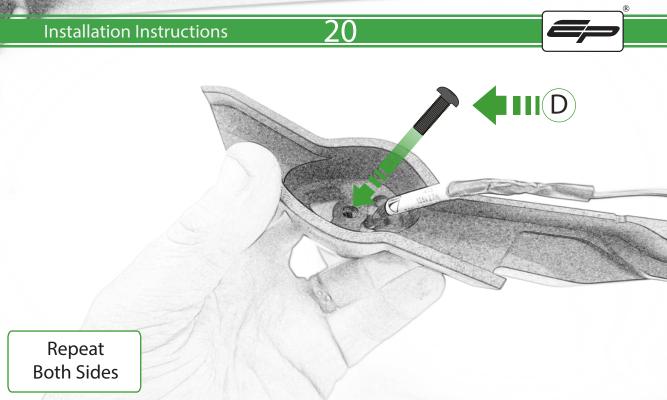


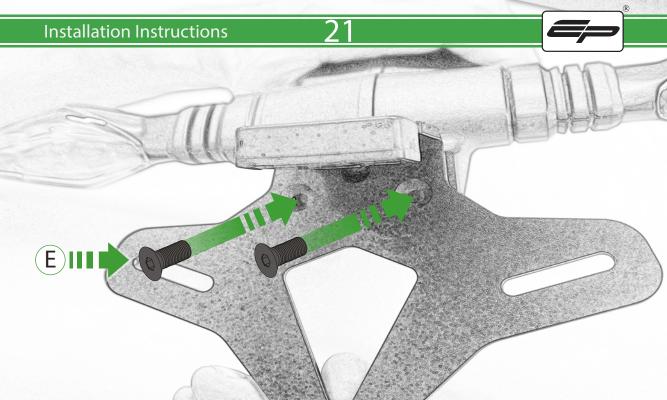








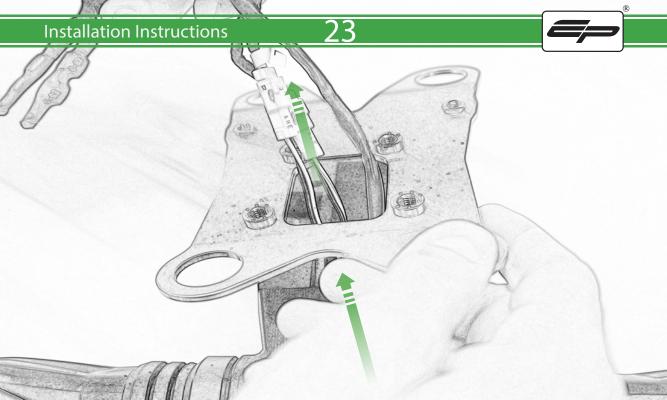


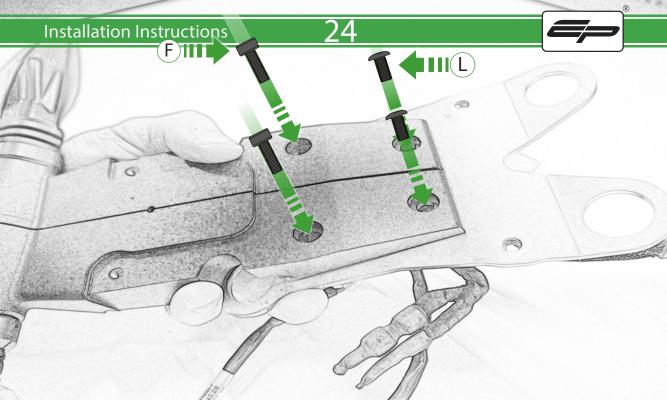

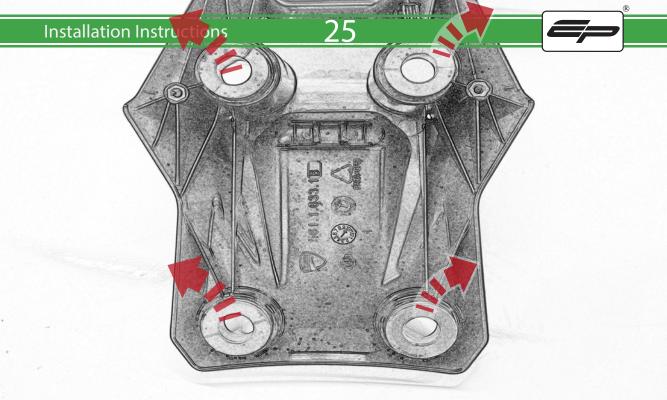

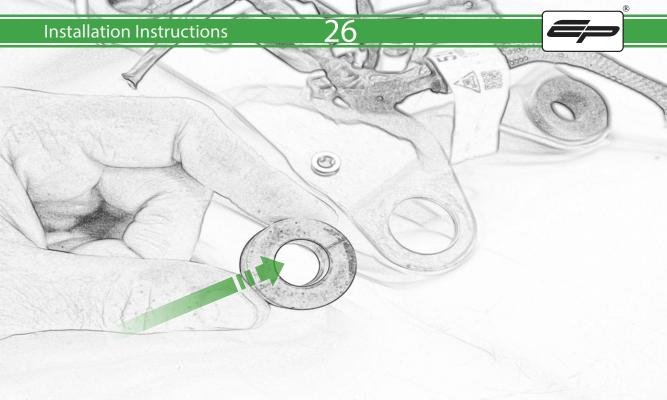

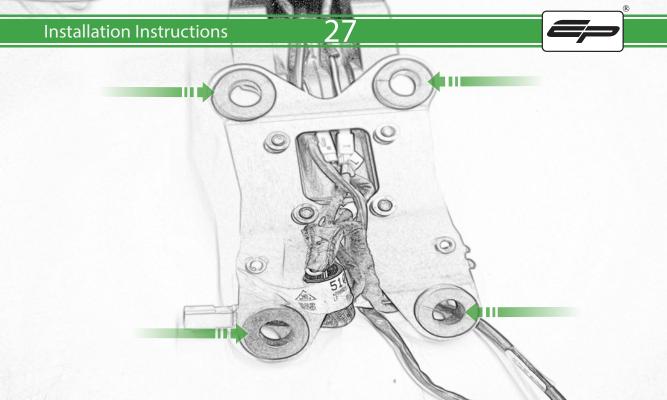

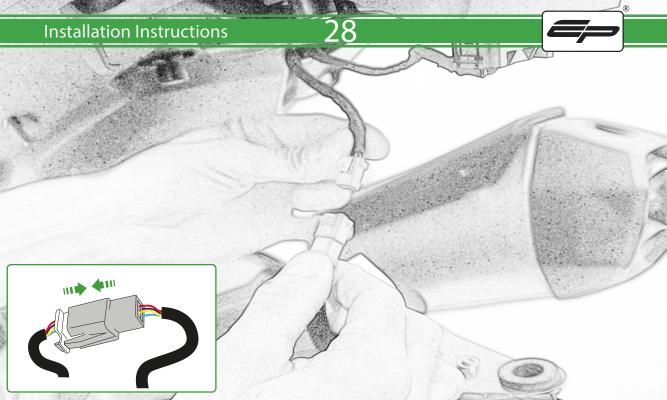










Caution Thread the loom into the free space above the undertray





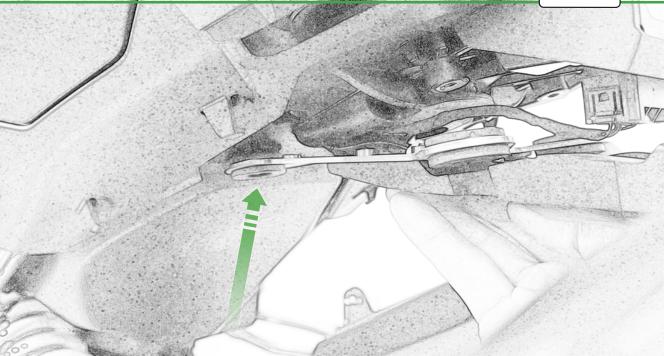

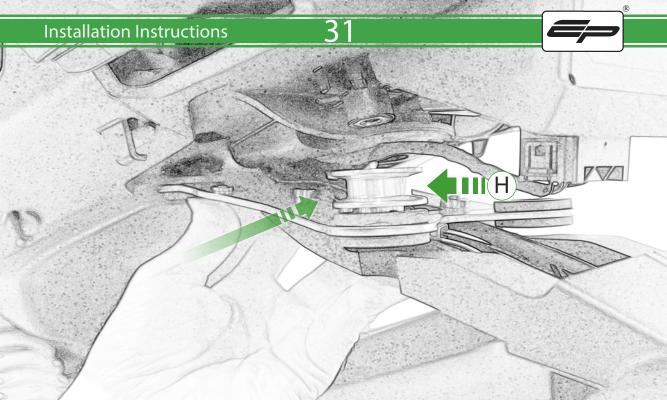

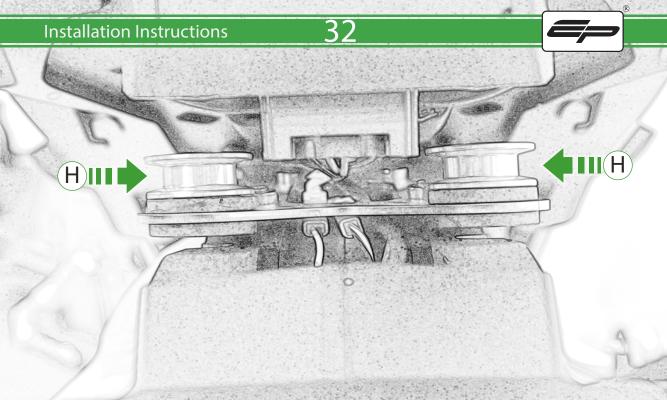





OEM PART





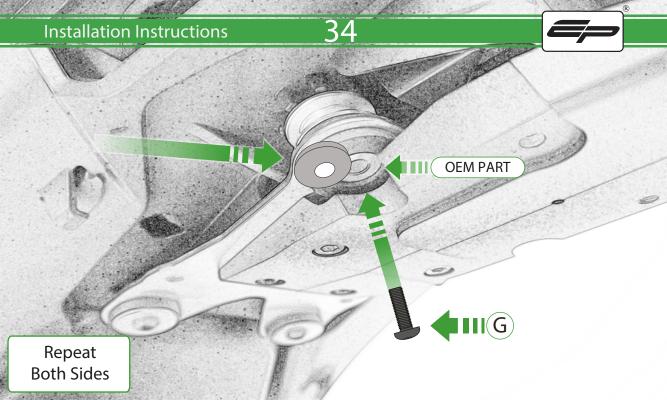

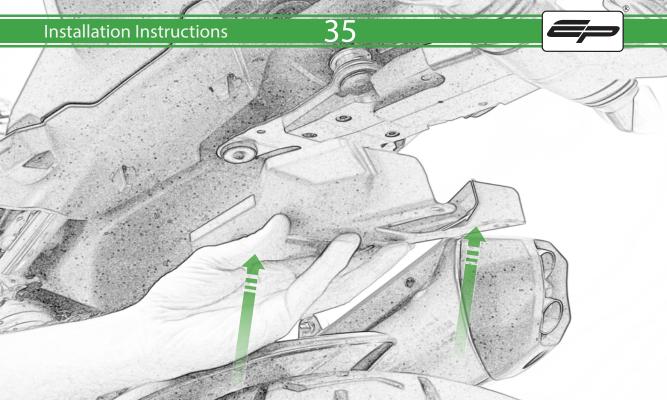















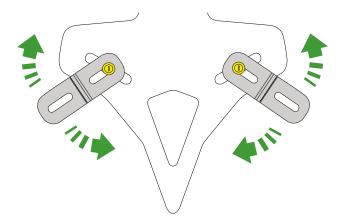



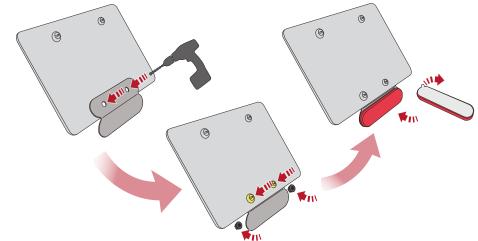





After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



www.evotech-performance.com