




BMW Brake Lever Protector Kit


Installation Instructions





Kit Contents


- Ⓐ 1 x Brake Protector
- Ⓑ 1 x Bar End Weight
- Ⓒ 1 x M10 x 50mm Caphead

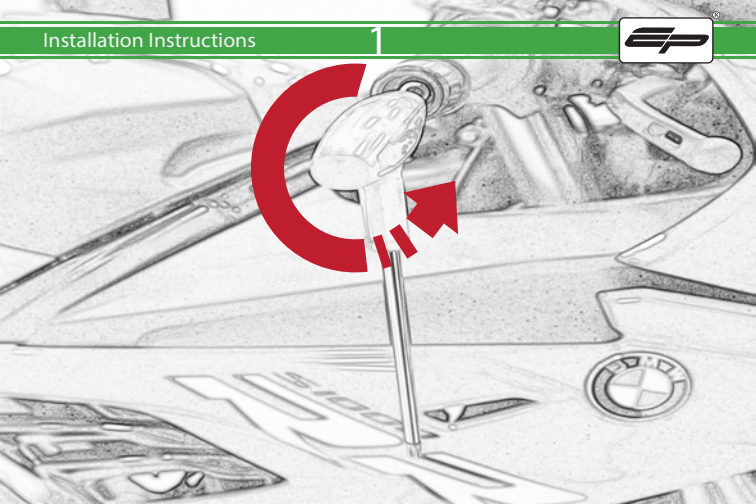


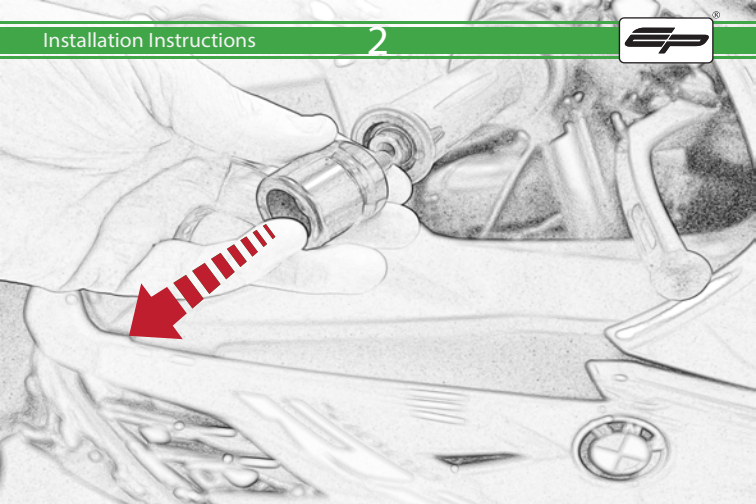

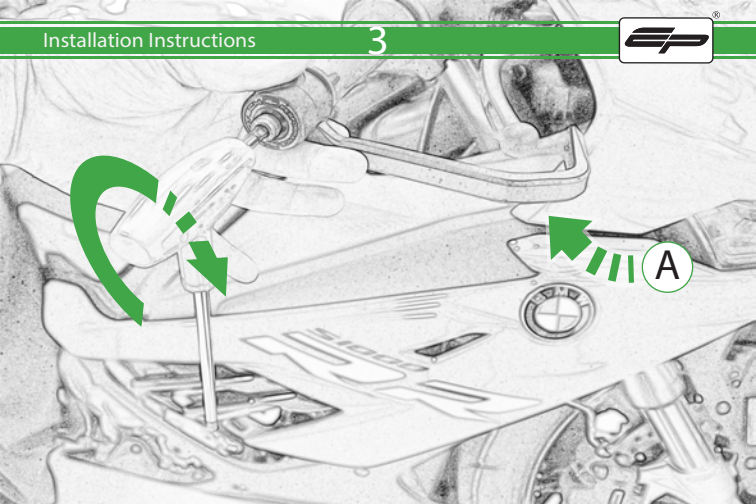

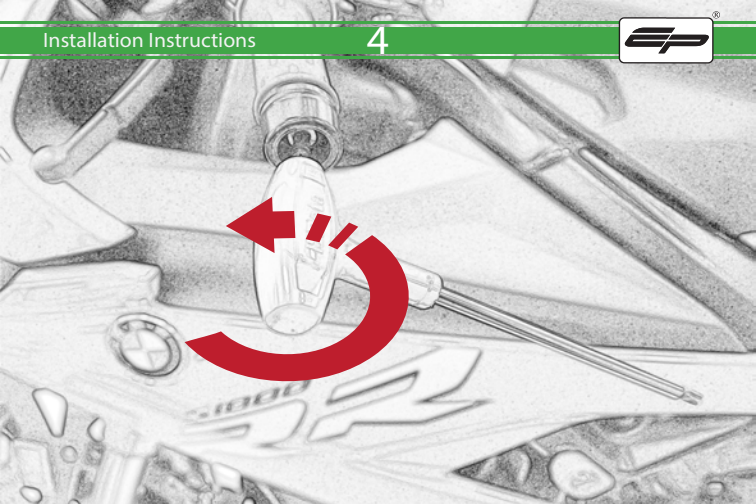

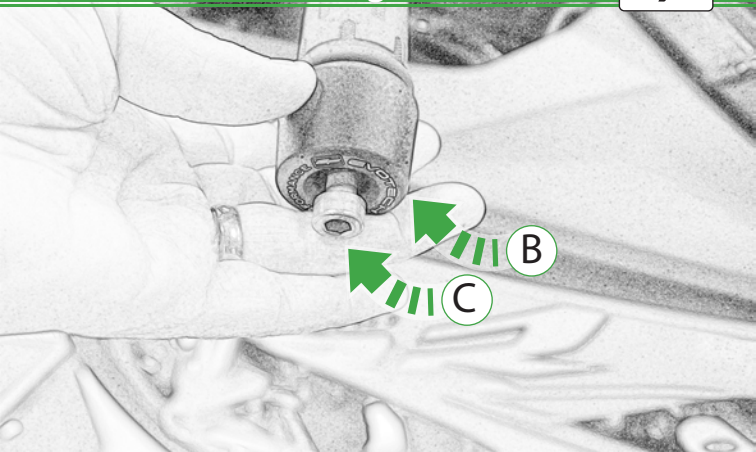

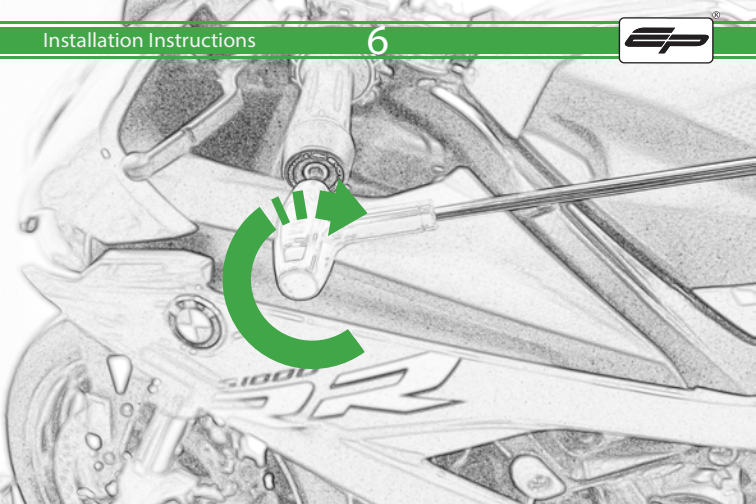



ESSENTIAL CHECKS

Please ensure the throttle grip has sufficient clearance between the brake lever protector / bar end weight before riding. It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com