



**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


BMW S 1000 RR  
Crash Protection





- Ⓐ 1 x L/H Bracket
- Ⓑ 1 x L/H Spacer
- Ⓒ 1 x R/H Spacer
- Ⓓ 1 x M10 x 75 x 1.5 Caphead
- Ⓔ 1 x M10 x 63 x 1.5 Caphead
- Ⓕ 1 x M10 x 60 x 1.5 Caphead
- Ⓖ 1 x M10 x 110 x 1.5 Caphead
- Ⓗ 2 x M10 Washer
- Ⓘ 2 x Low Profile Bobbin
- ⓵ 2 x Poly Washer


**EVO-TECH**®  
P E R F O R M A N C E

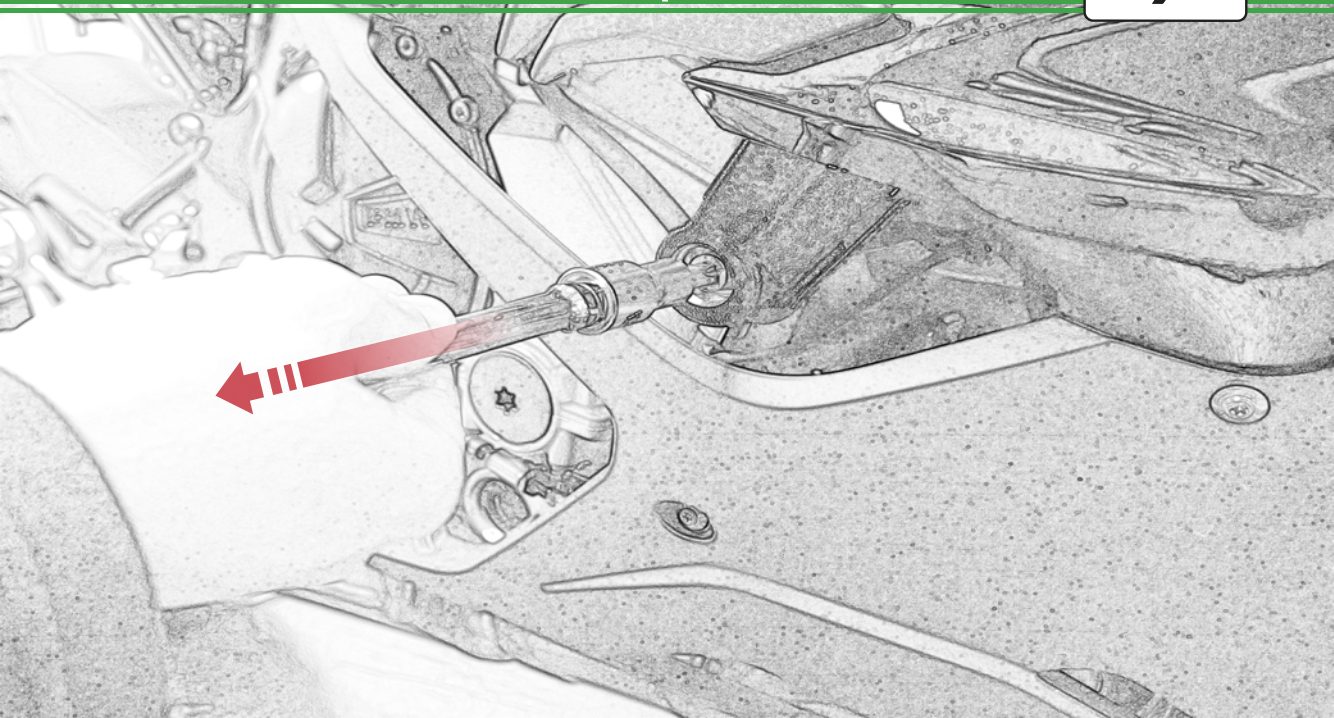


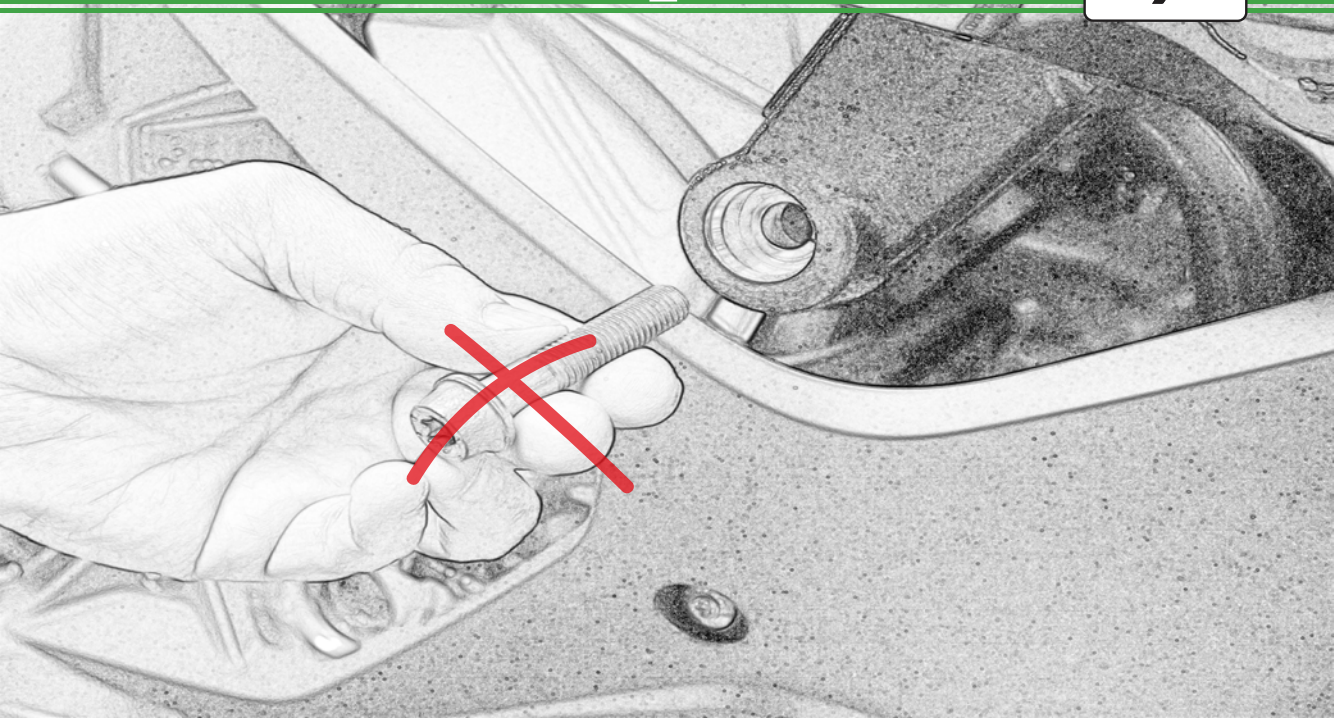

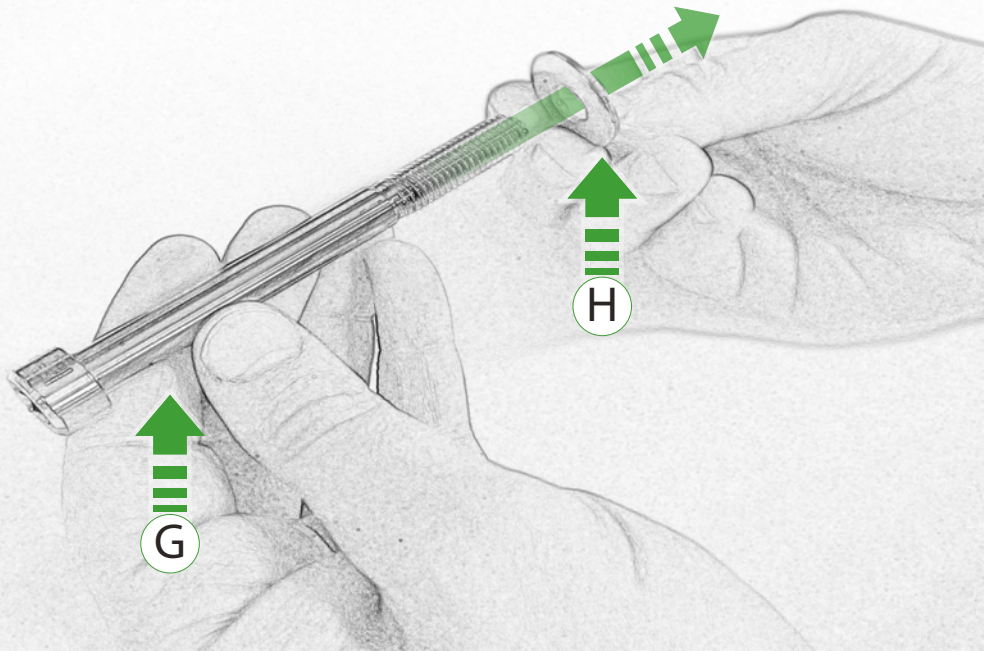


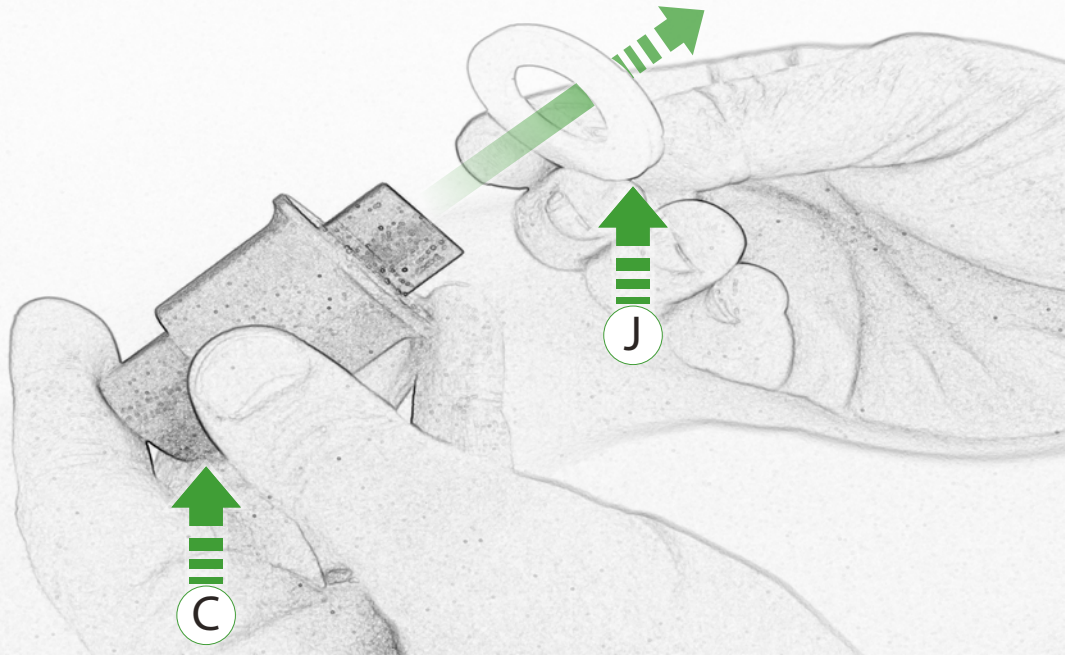


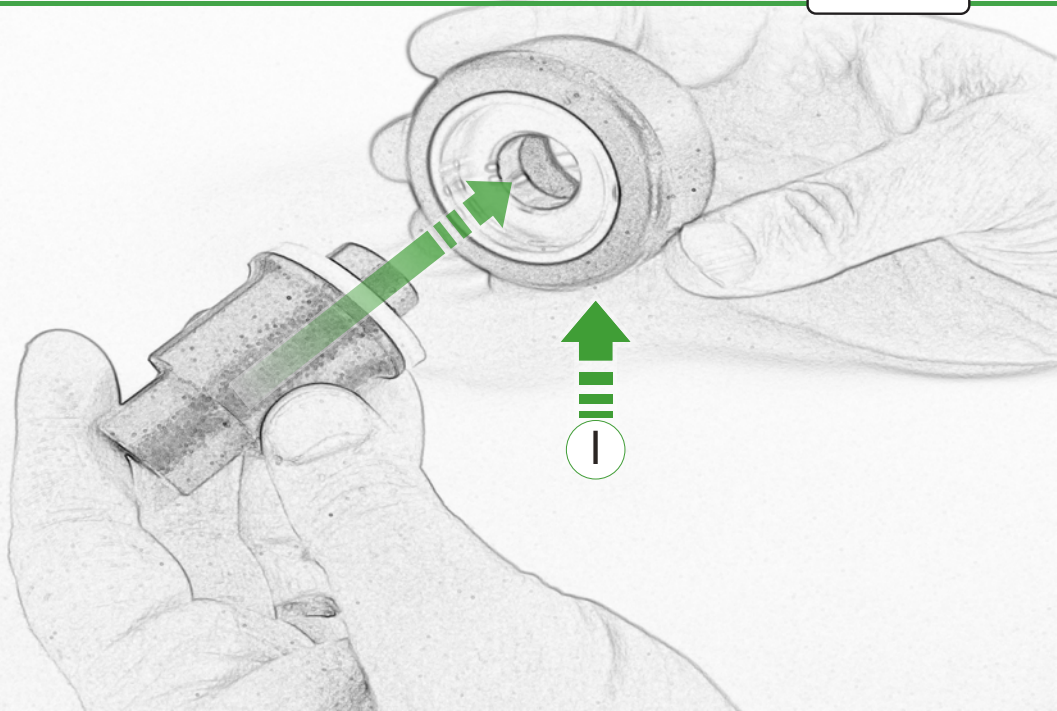

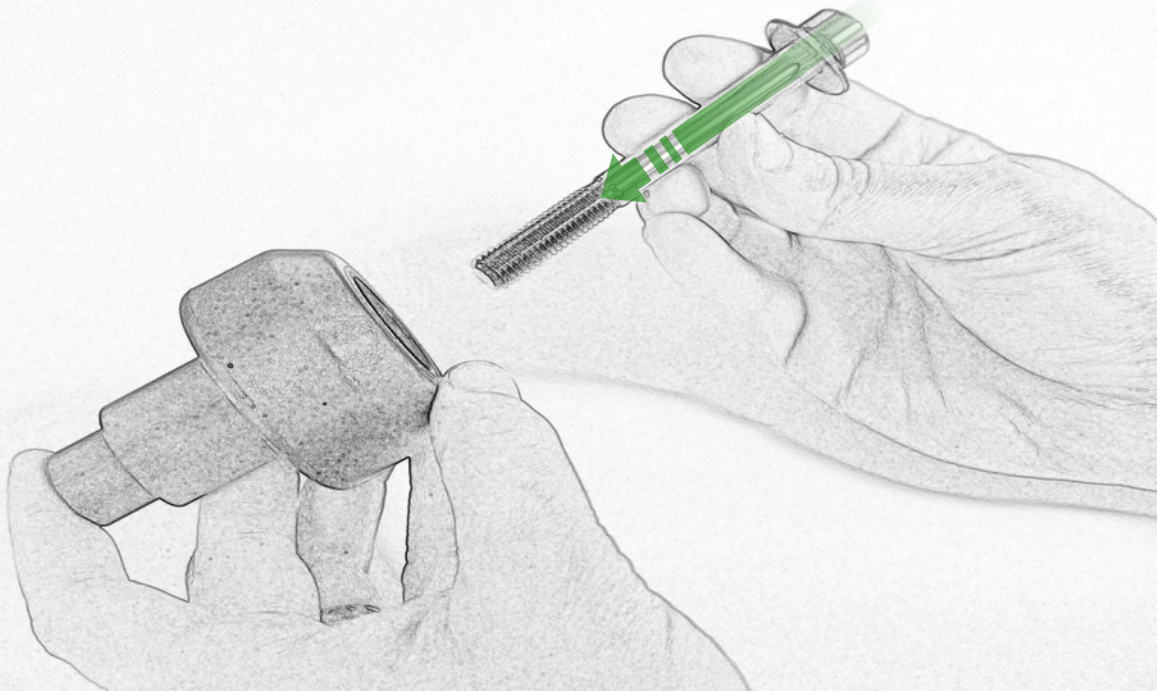




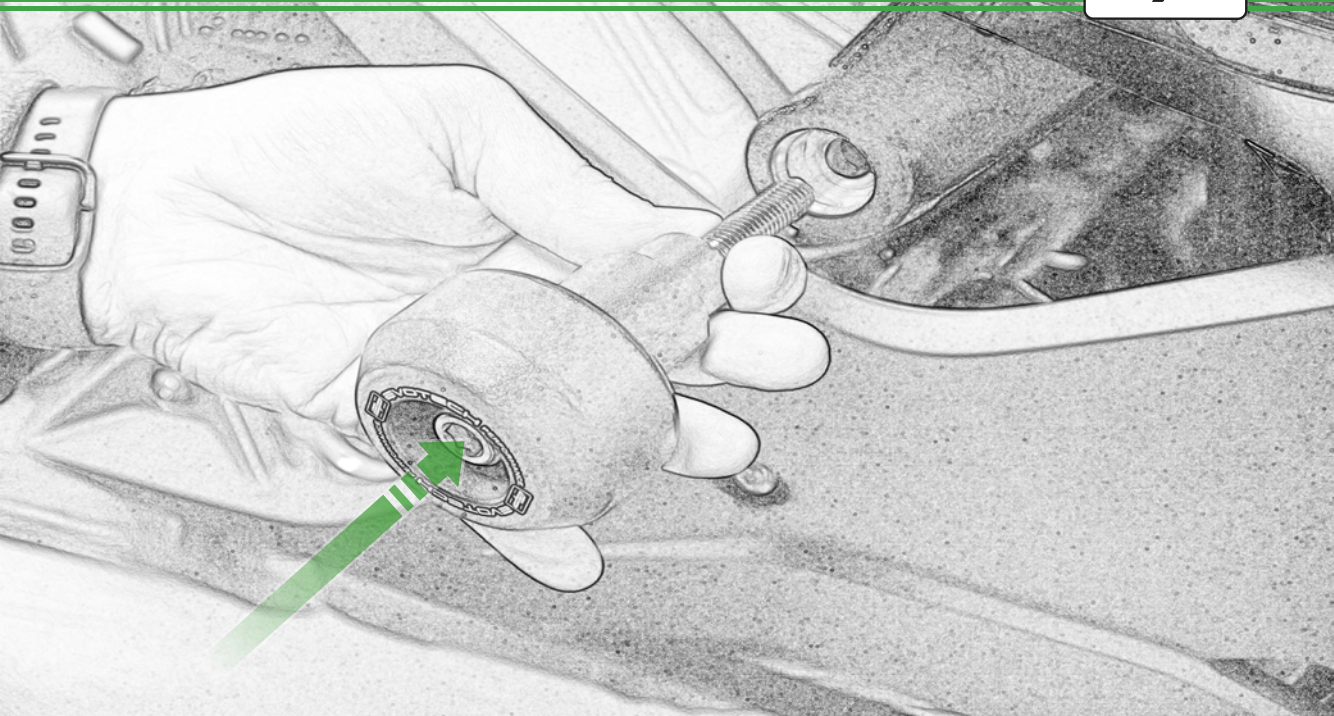


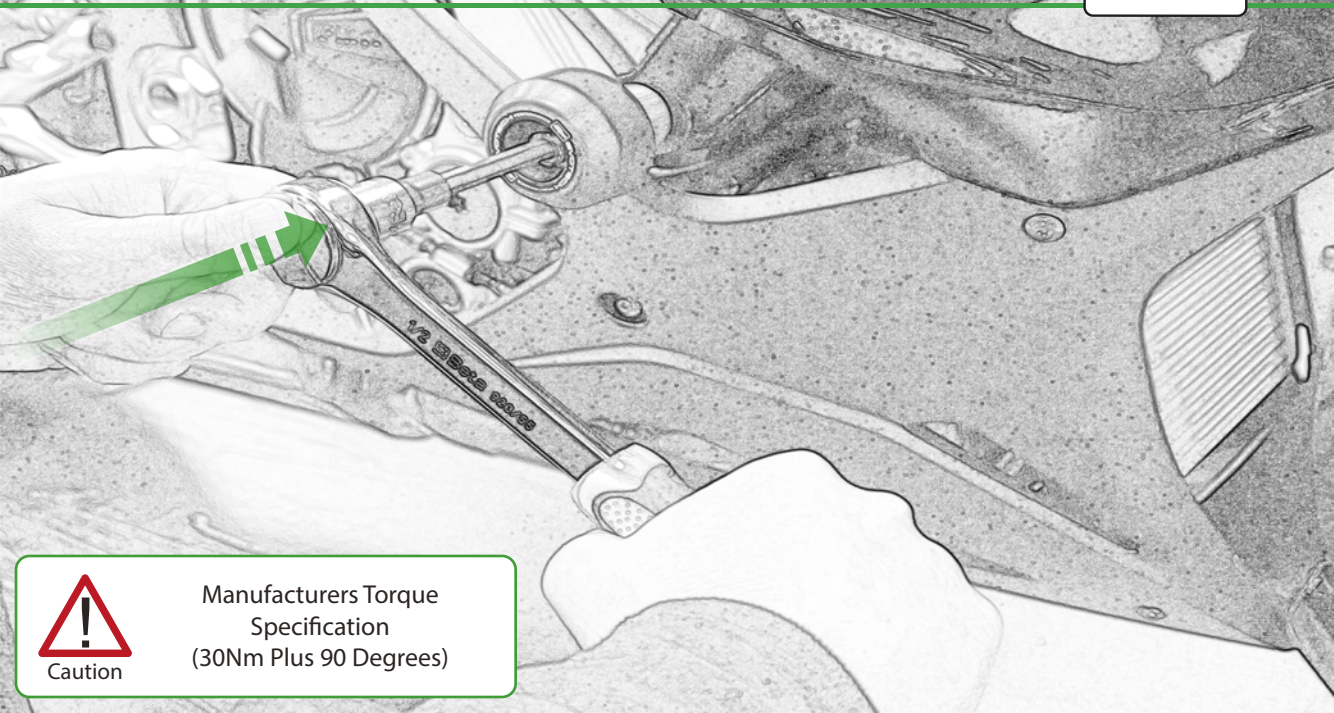



Caution


Manufacturers Torque  
Specification  
(30Nm Plus 90 Degrees)

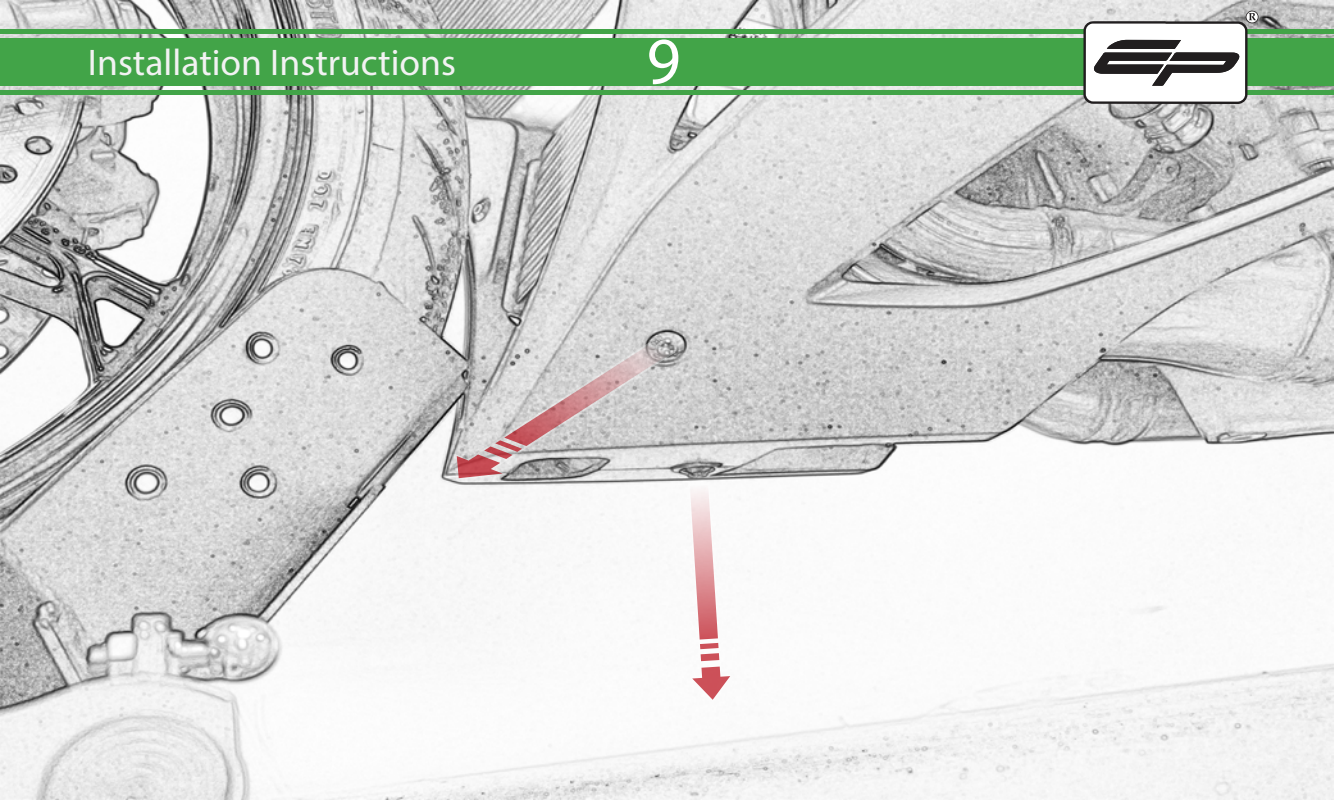


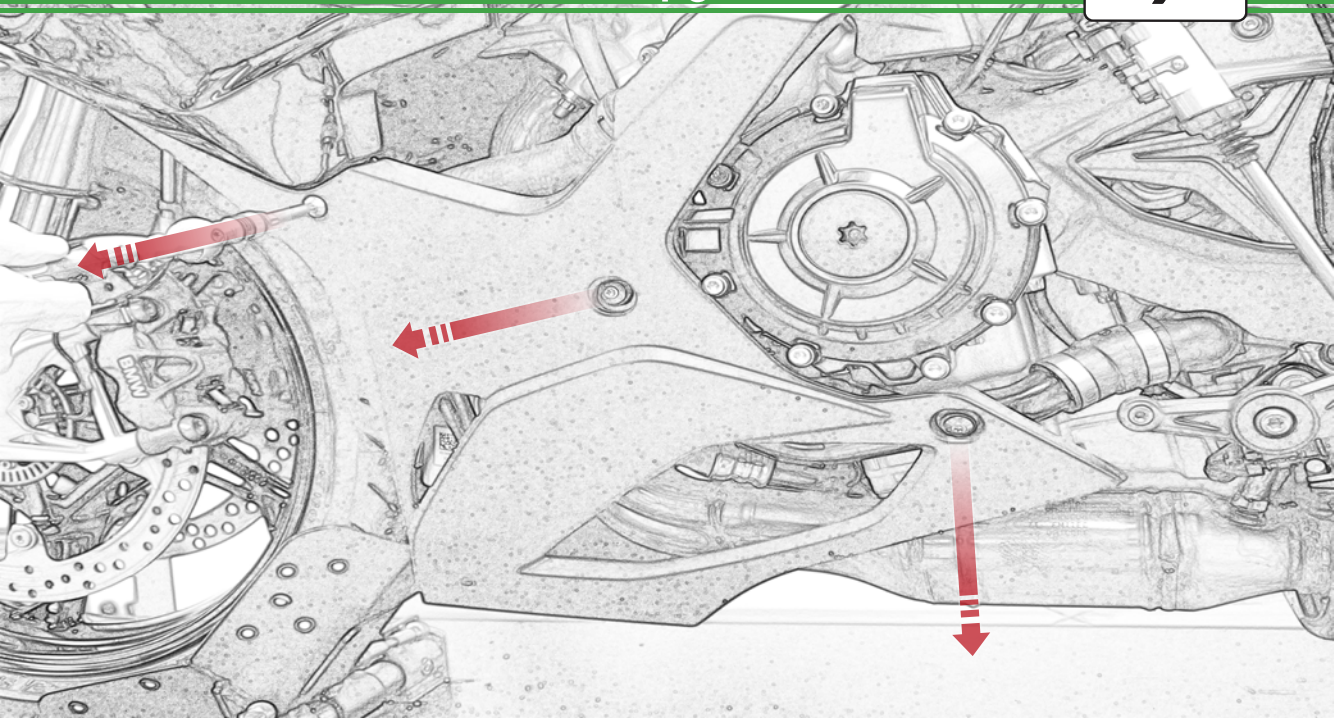

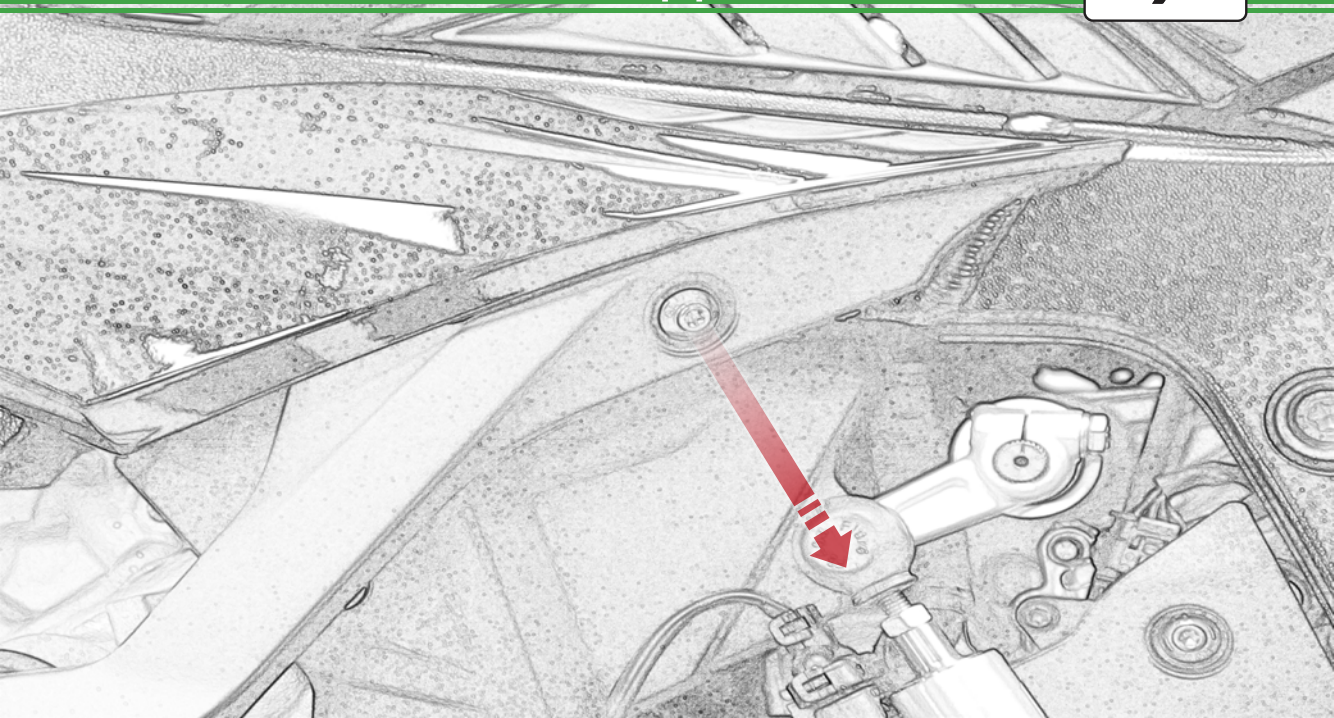


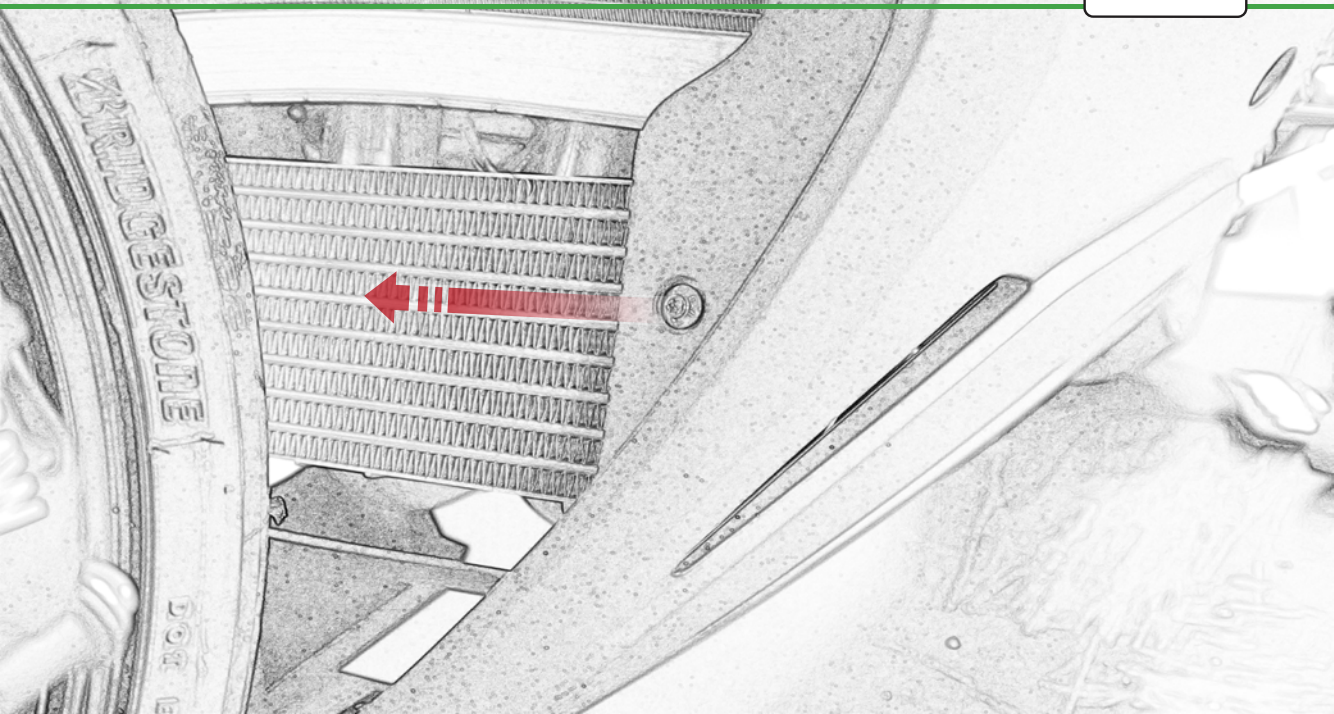

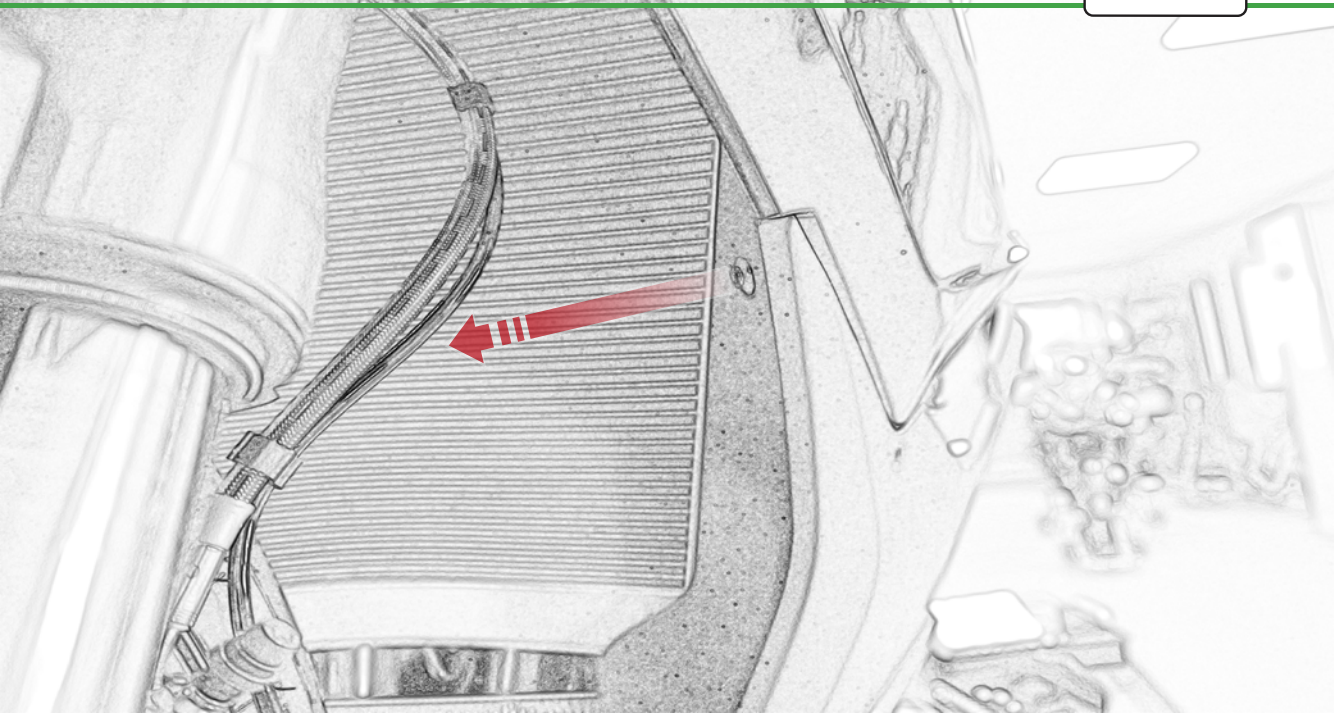


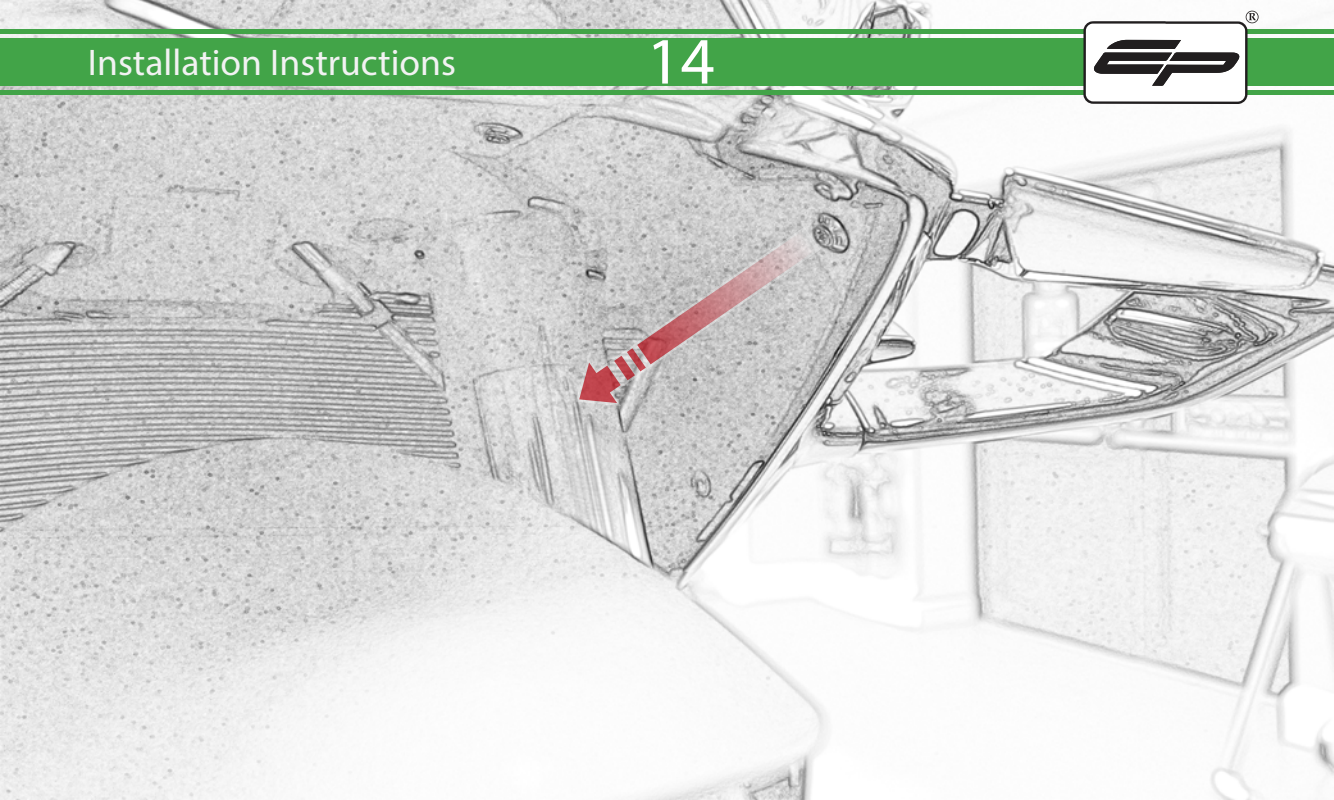





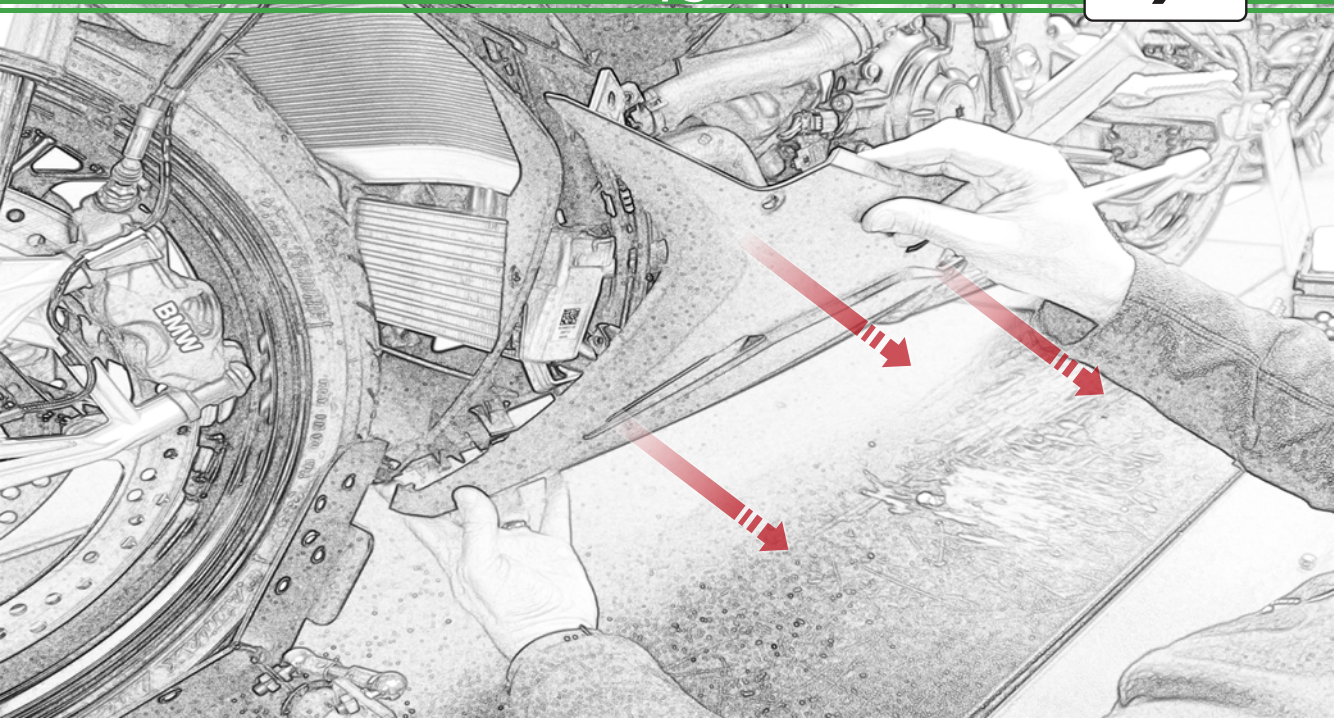





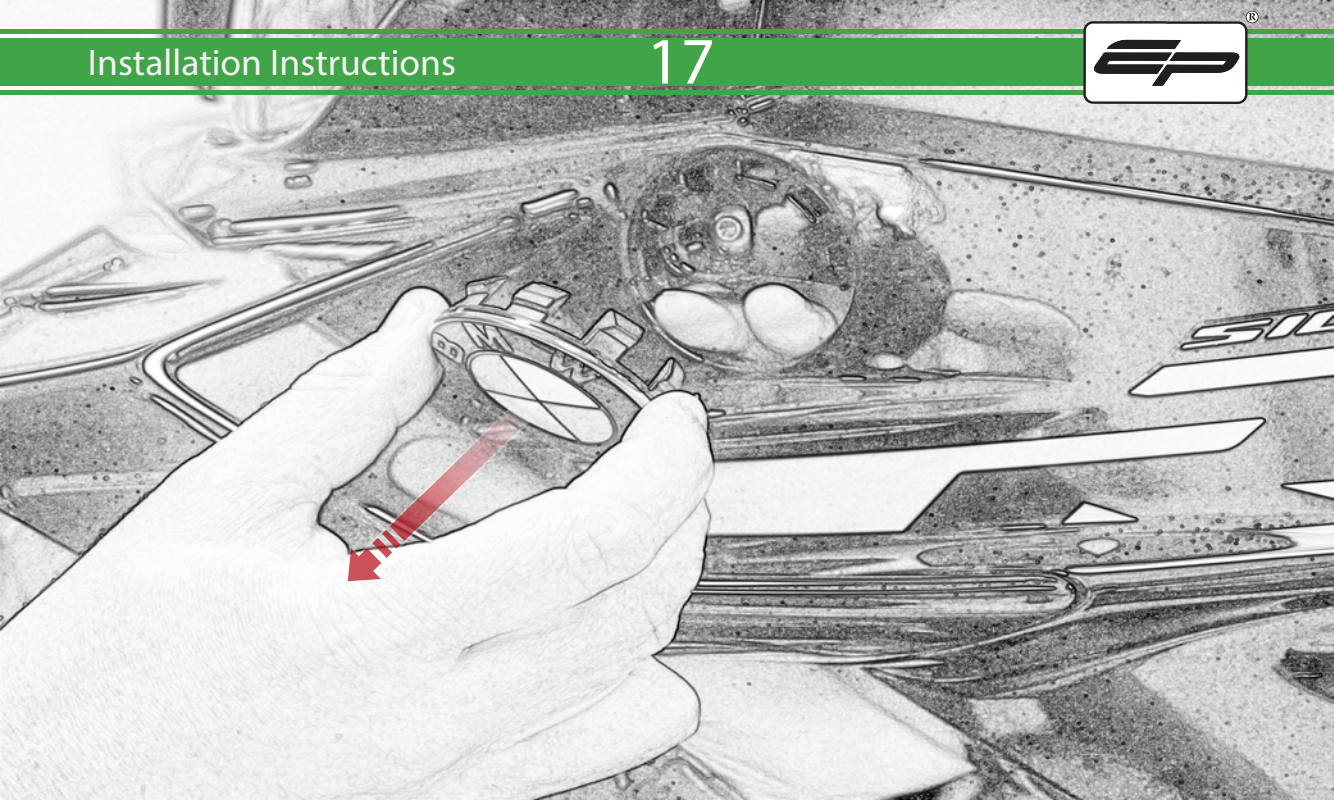


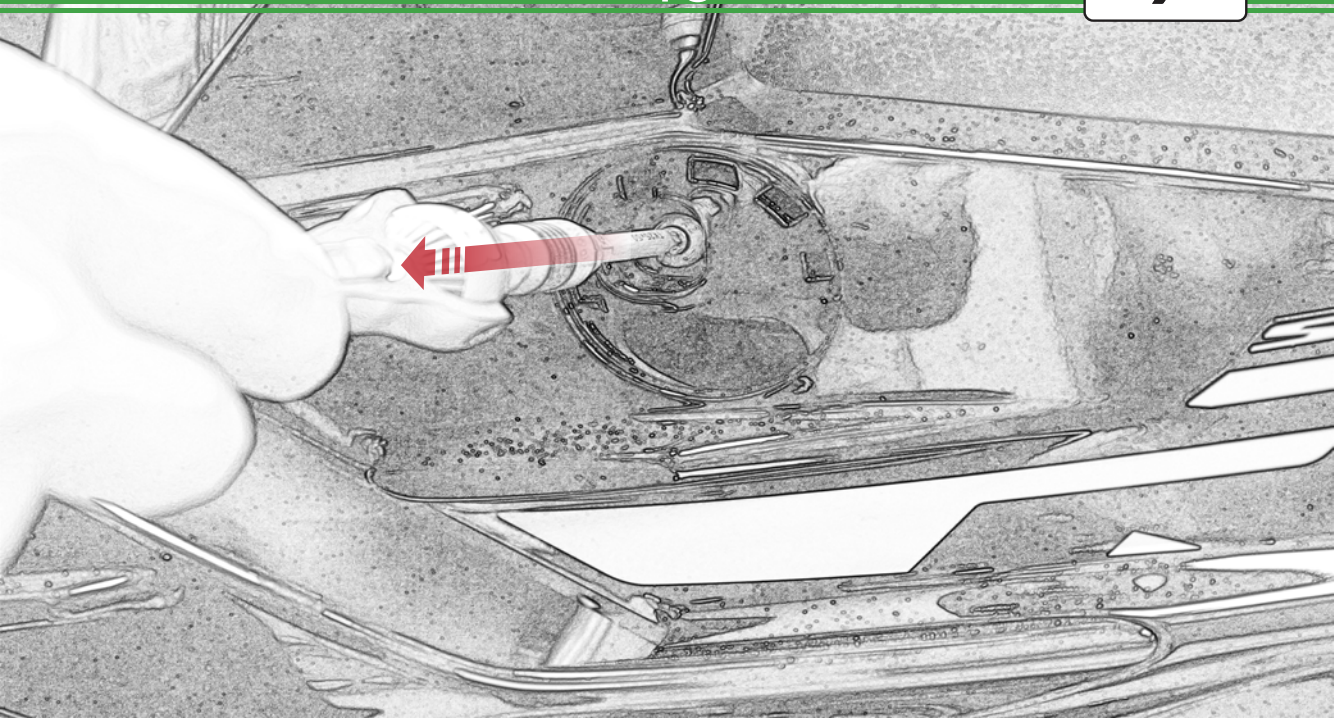

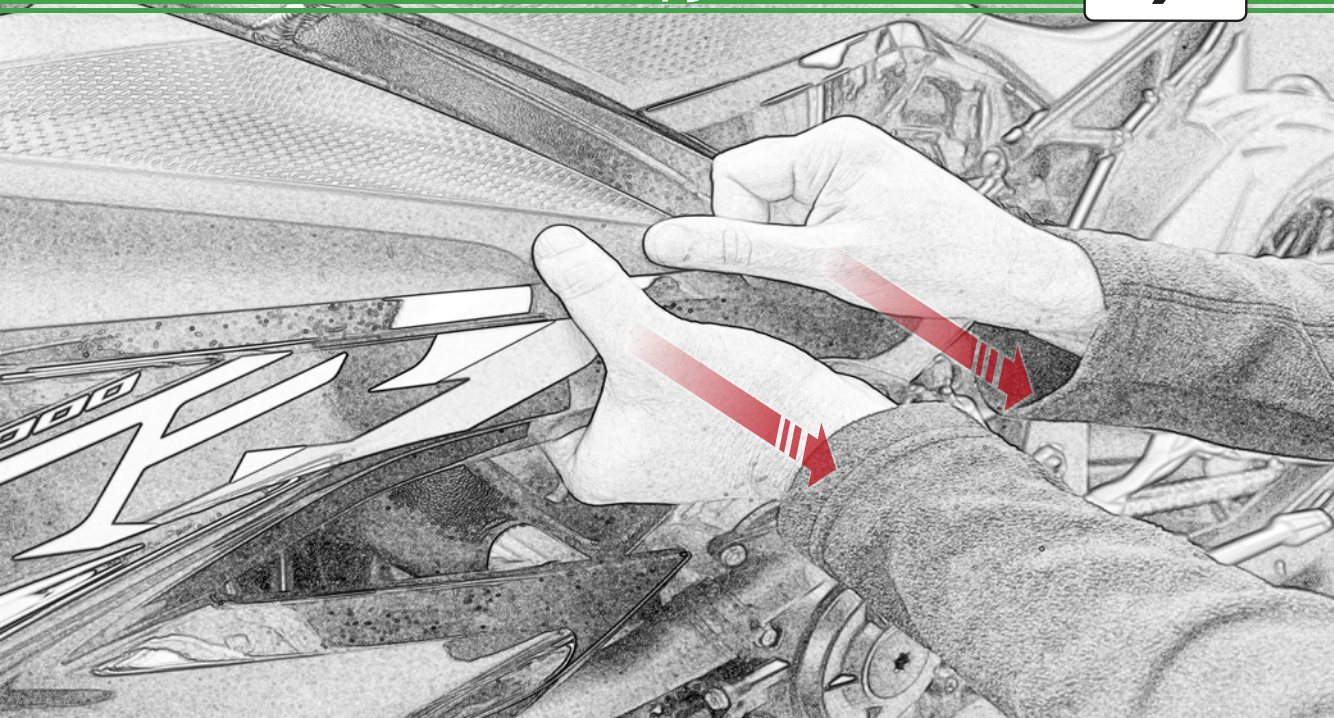


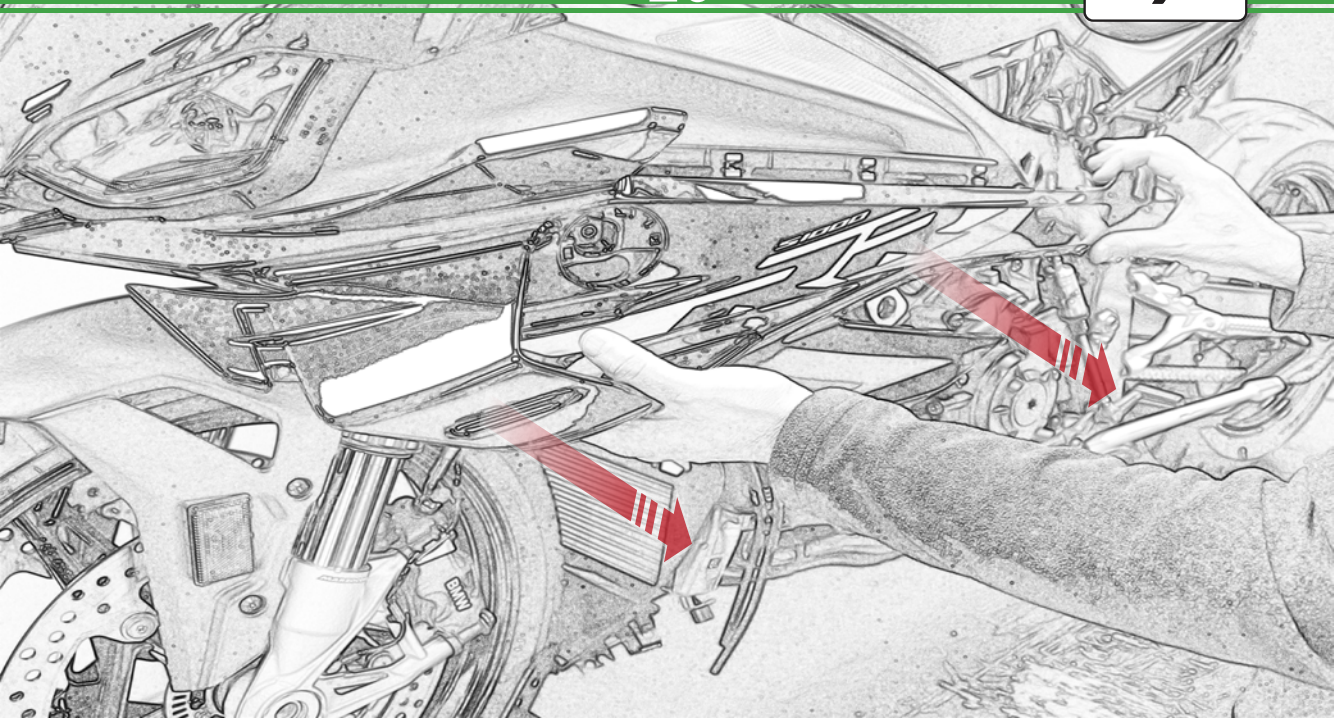


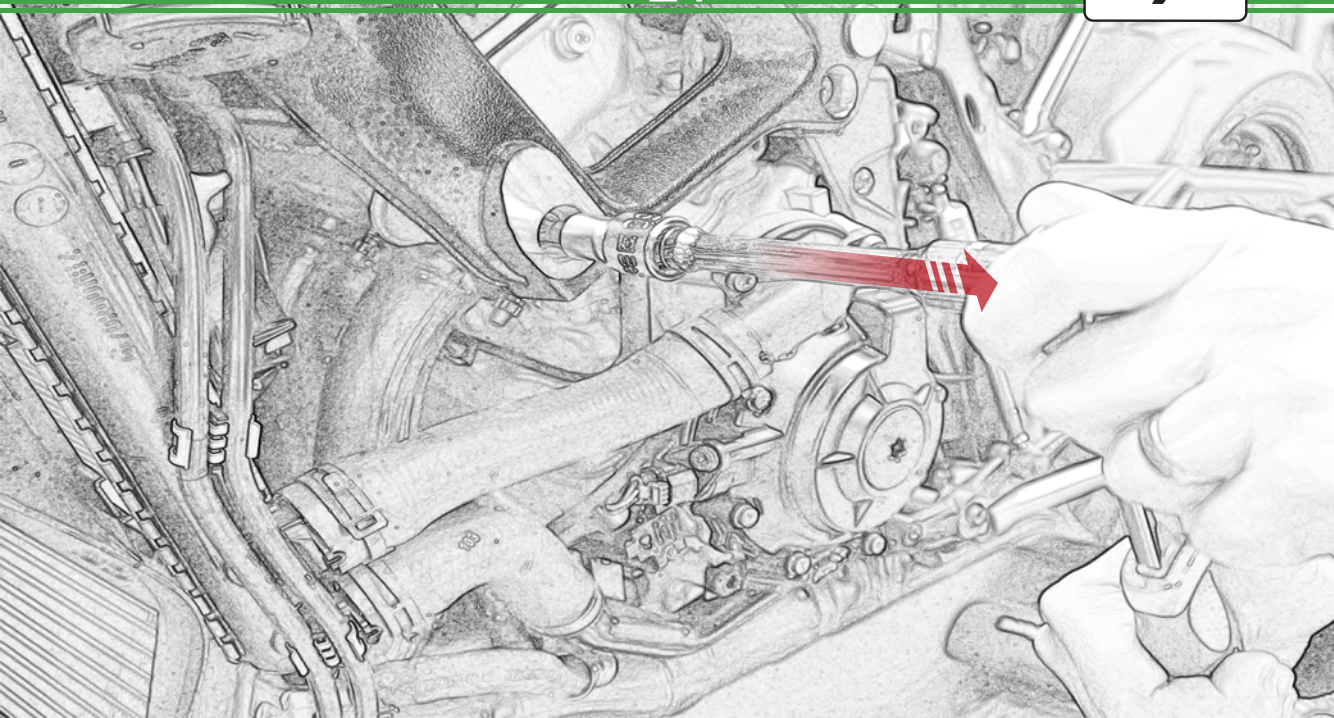

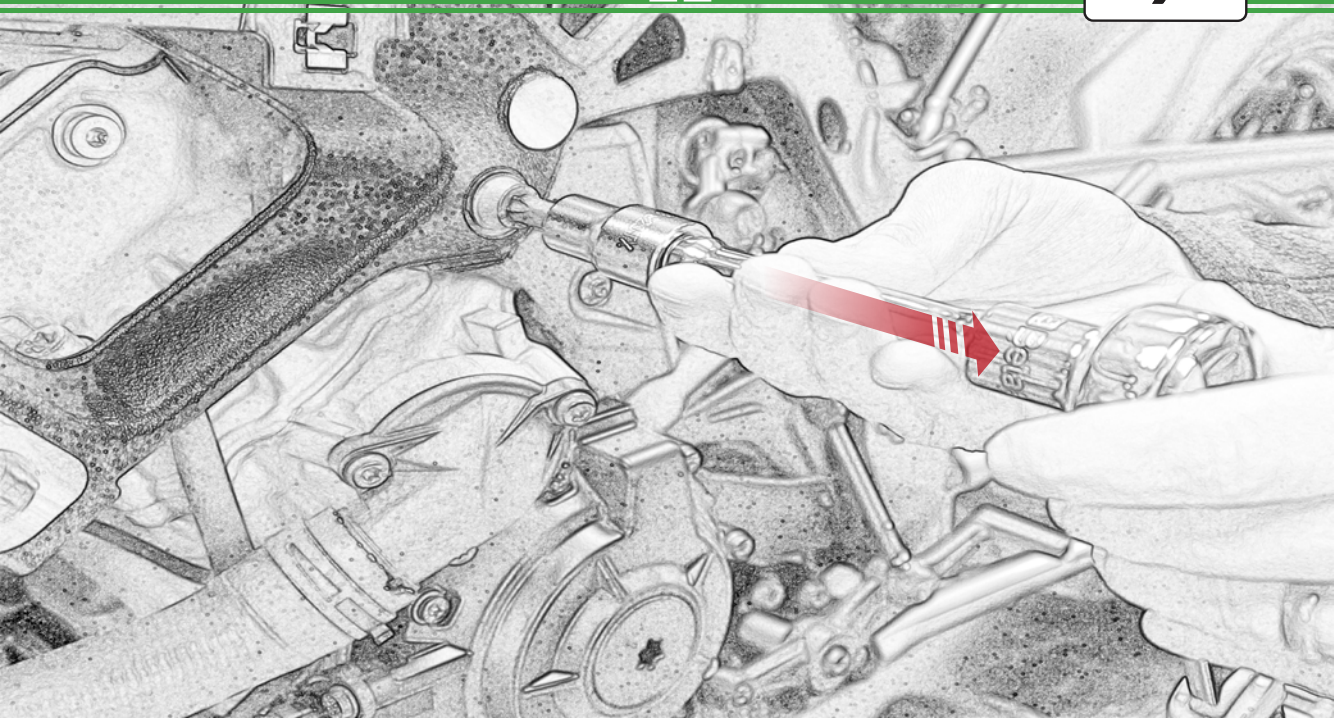




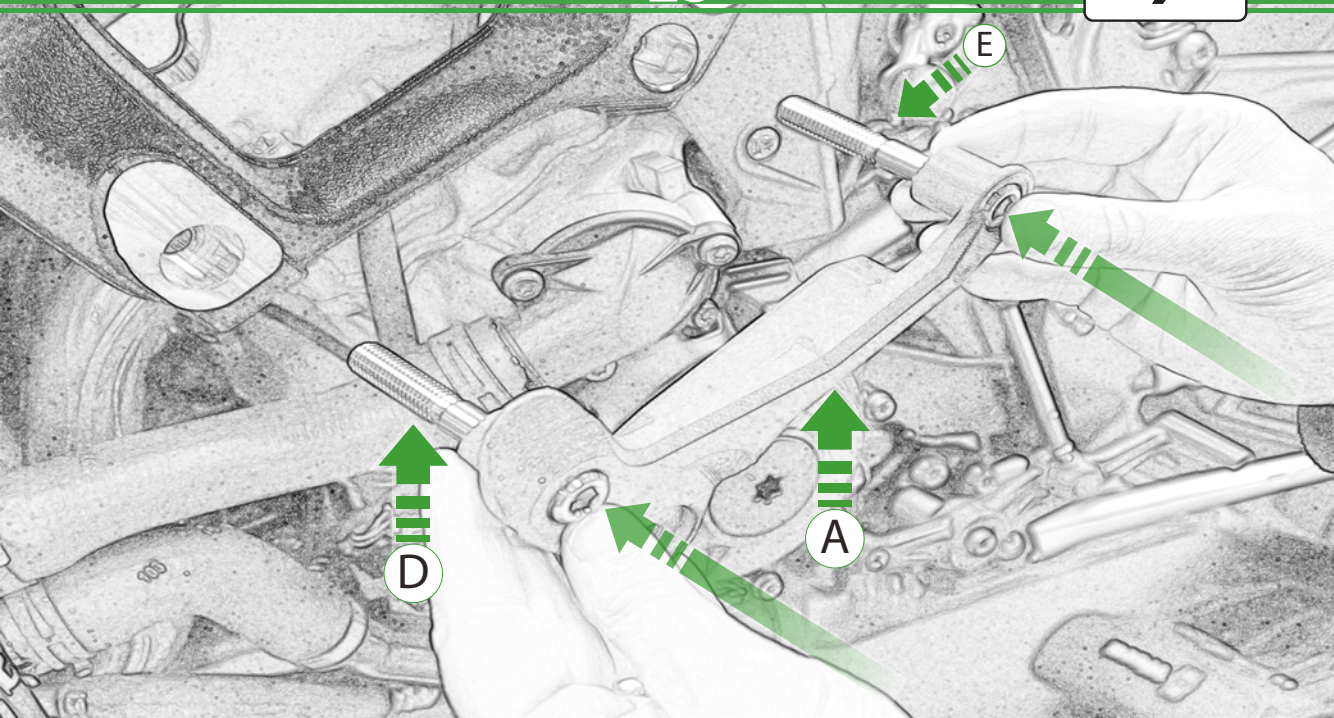

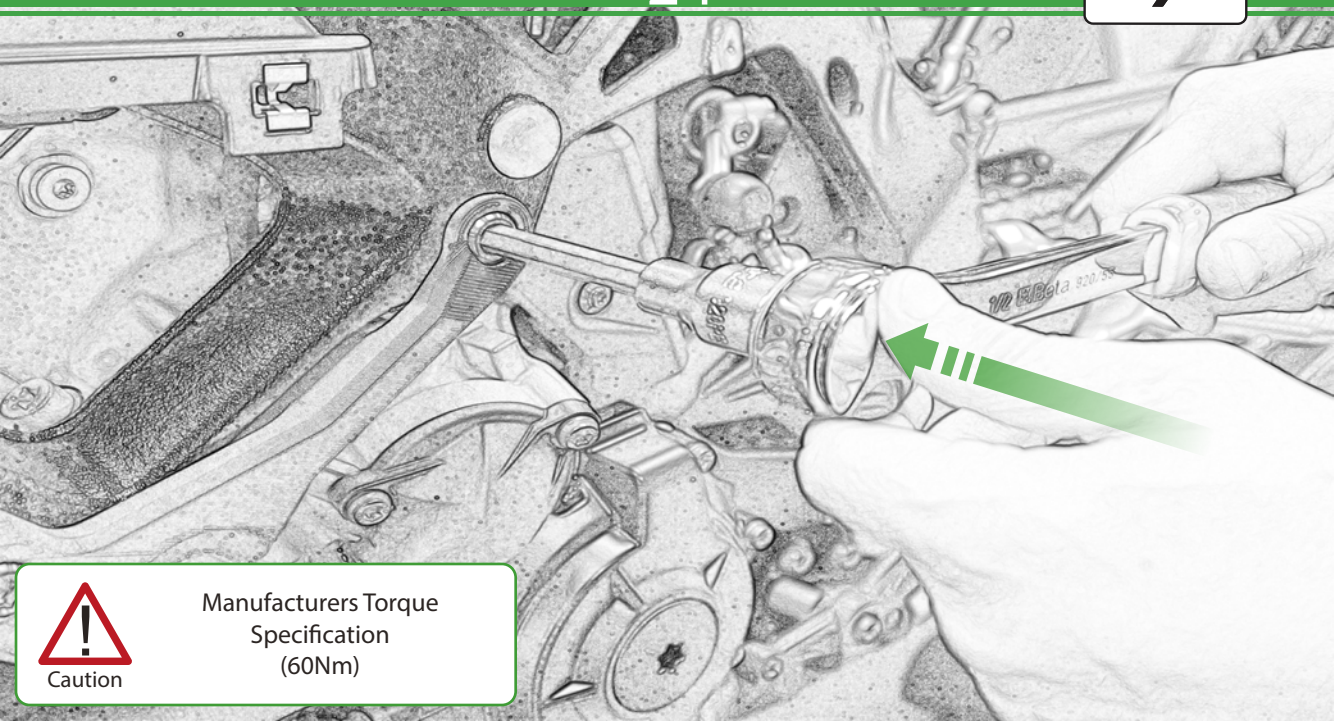


Caution


Manufacturers Torque  
Specification  
(60Nm)

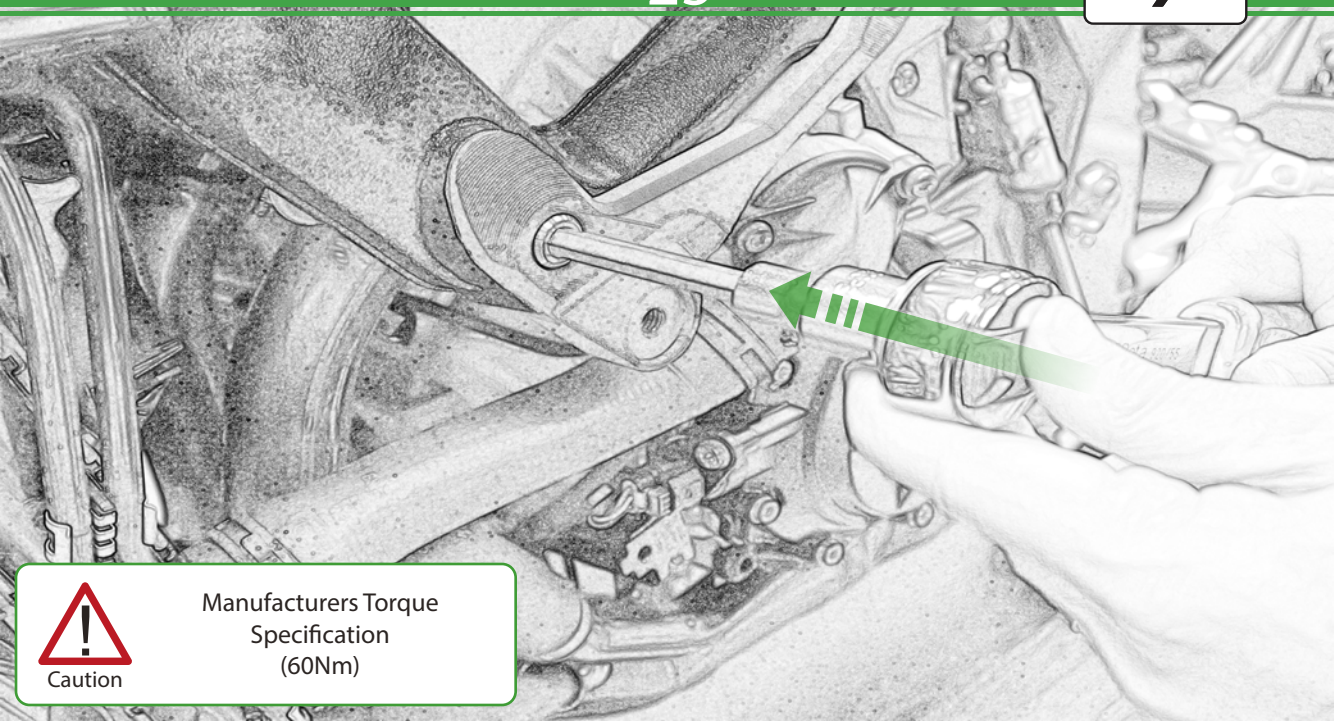


Caution

Manufacturers Torque  
Specification  
(60Nm)

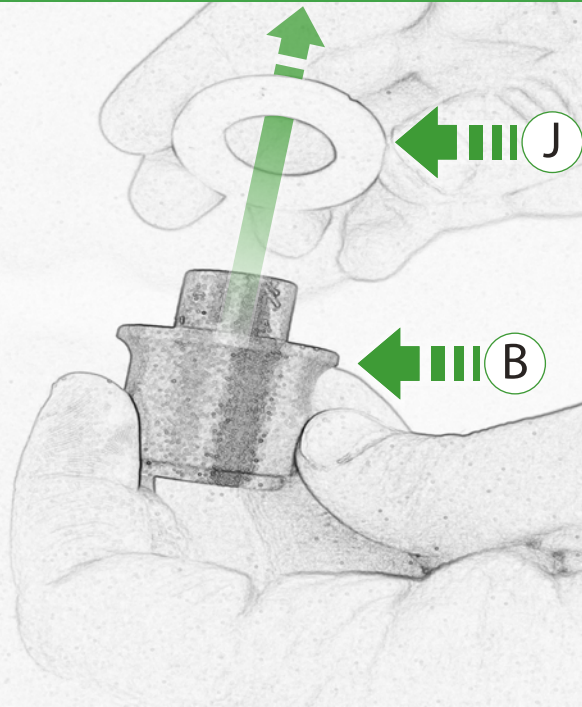

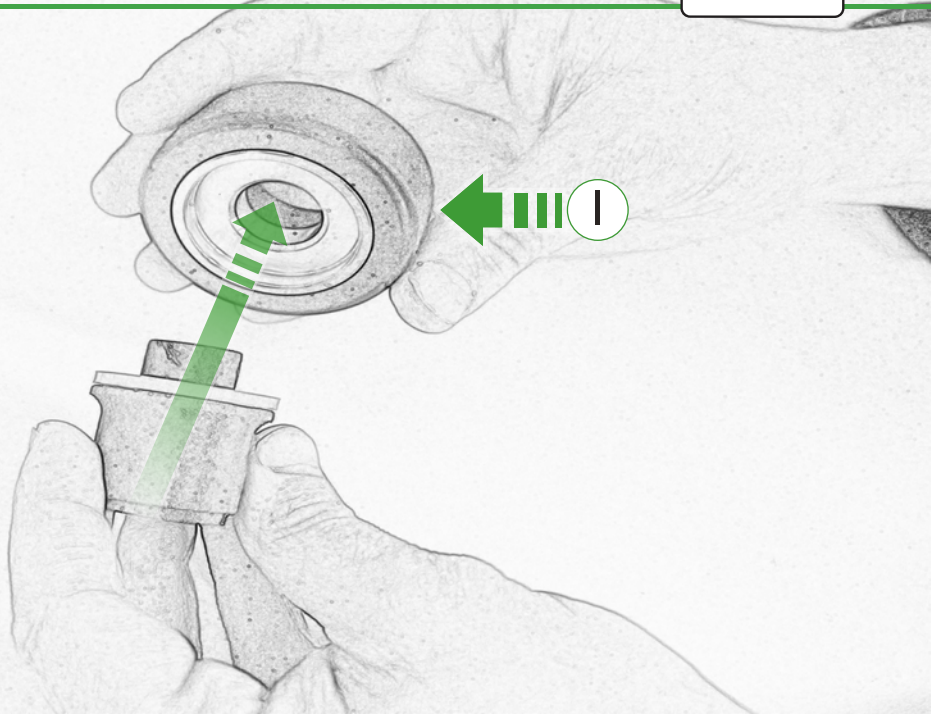


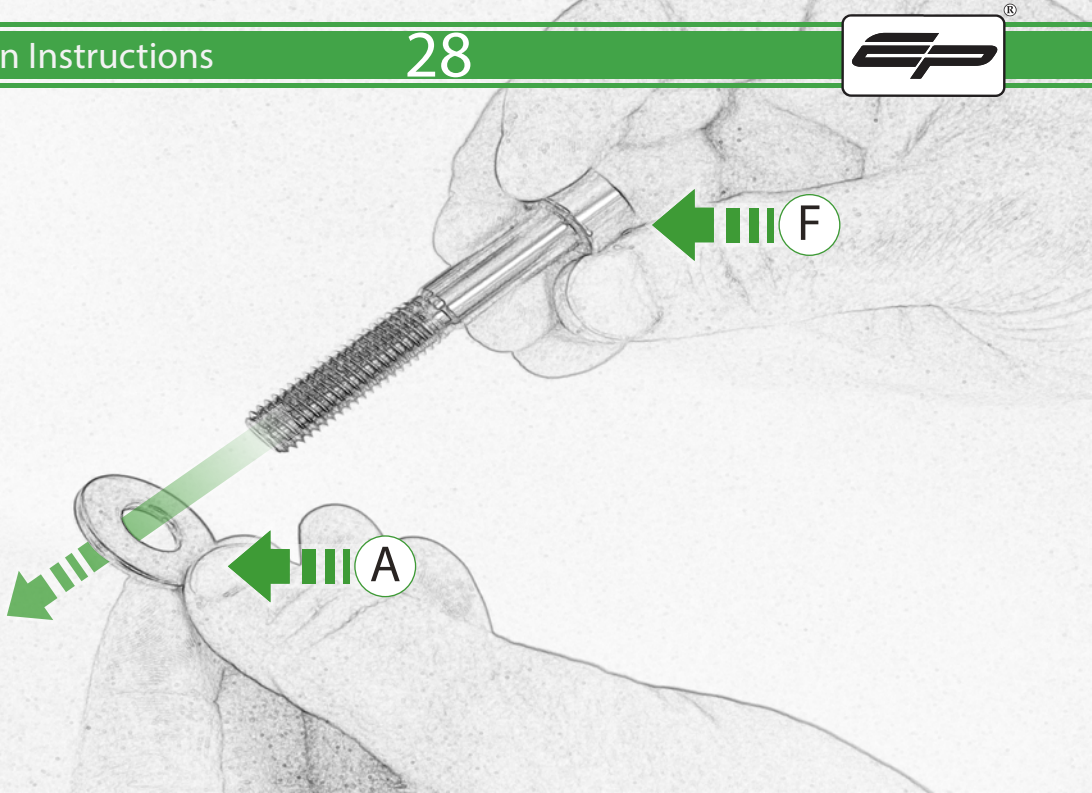








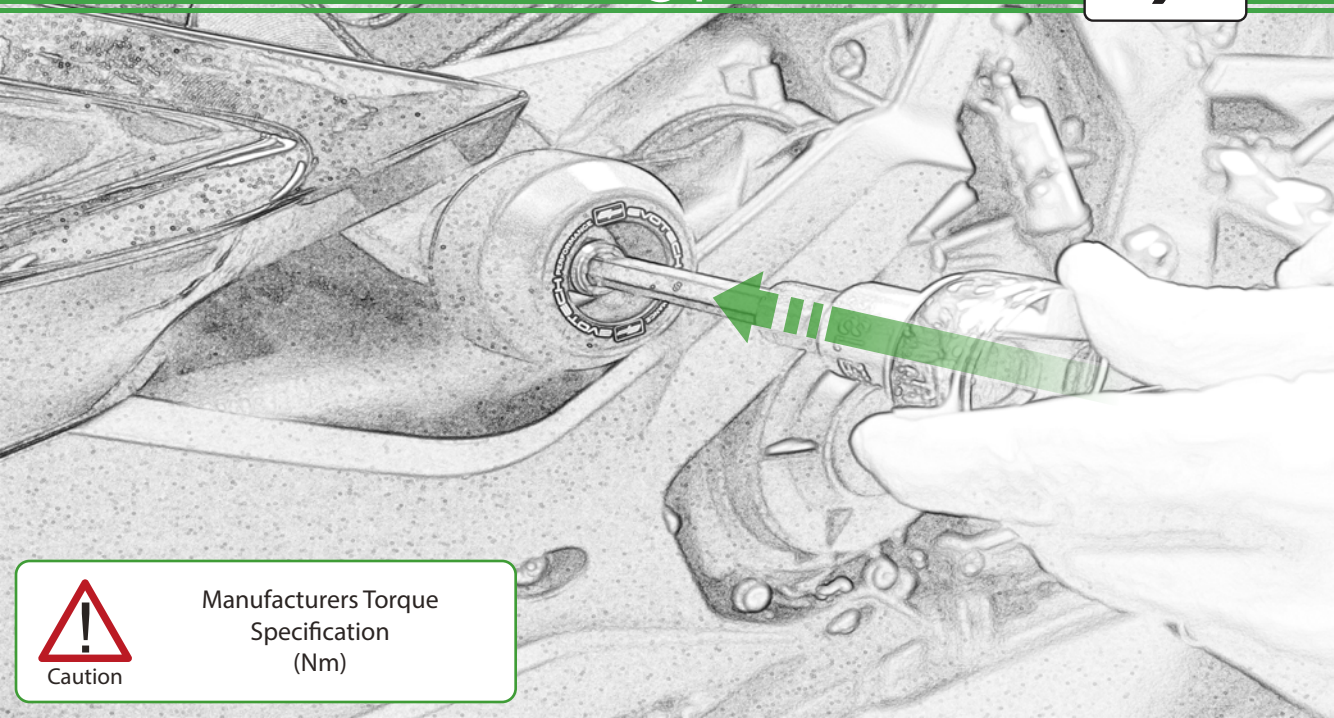

Caution

Manufacturers Torque  
Specification  
(Nm)

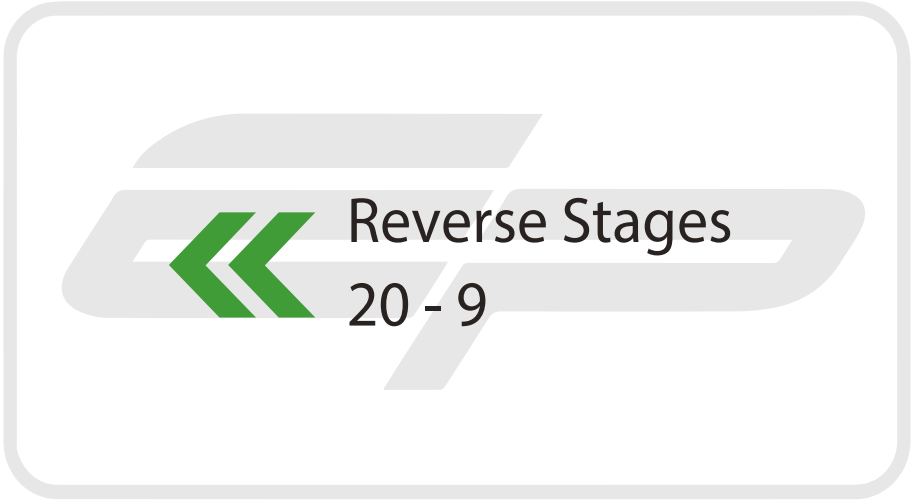



## **ESSENTIAL CHECKS**



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)